
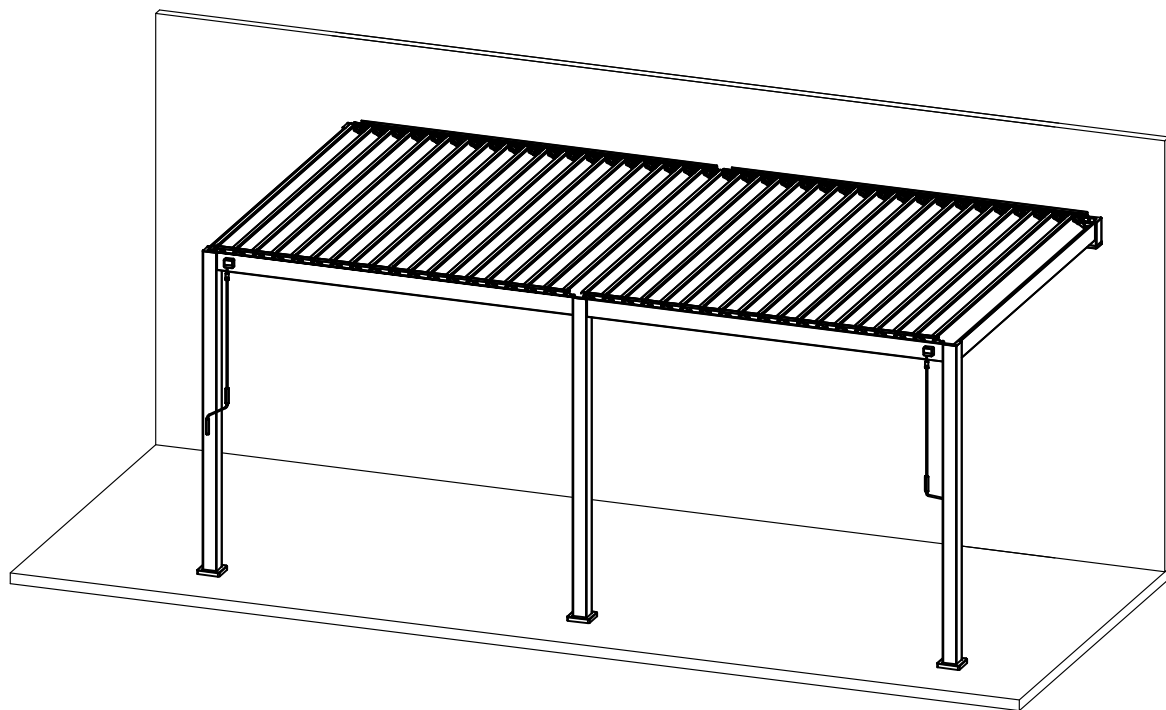

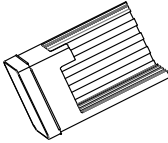
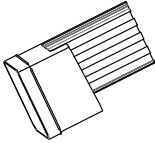
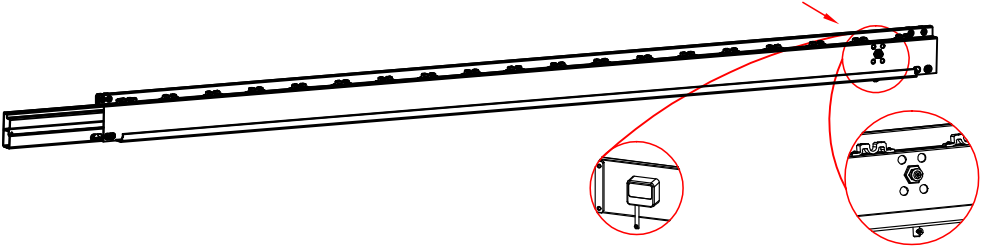
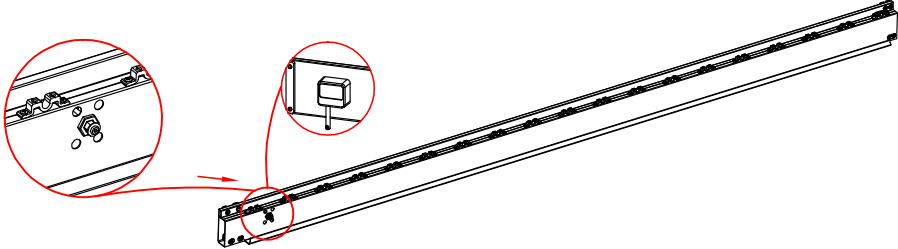







REFLECT 3x6m







User Manual




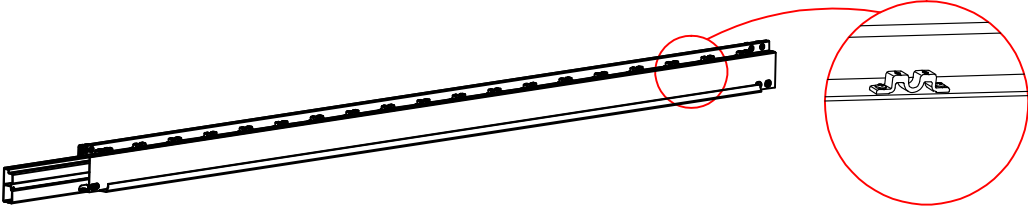





	REF	QTY		REF	QTY		REF	QTY
Carton 1/5	(A)	2PCS		(A1)	1PC		(A2)	2PCS
	(A3)	1PC						
Carton 2/5	(B)	1PC		(B1)	1PC		(B2)	1PC
	(B3)	1PC		(C)	2PCS		(E)	2PCS
	(G)	4PCS		(H)	2PCS		(I)	3PCS
	(J)	3PCS		(K)	77PCS		(L)	2PCS
	(M)	79PCS		(N)	4PCS		(N1)	2PCS
	(O)	20PCS		(P)	160PCS		(Q)	160PCS
	(R)	24PCS		(S)	87PCS		(T1)	4PCS
	(T2)	32PCS		(U1)	4PCS		(U2)	2PCS
	(U3)	1PC		(V)	2PCS		(W)	22PCS
	(X)	1PC		(Y)	2PCS		(Z3)	1PC
	User Manual	1SET		(Z)	1PC			
Carton 3/5	(D)	13PCS						
Carton 4/5	(D)	13PCS						
Carton 5/5	(D)	12PCS						

REF	PICTURE	QTY
A		2PCS
A1		1PC
A2		2PCS
A3		1PC
B		1PC
B1		1PC
B2		1PC

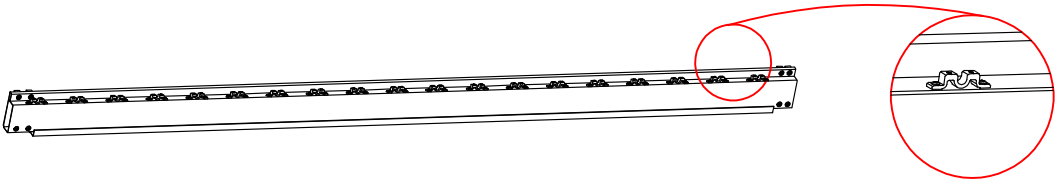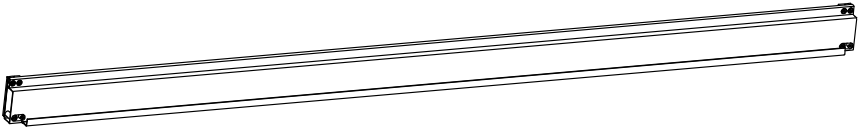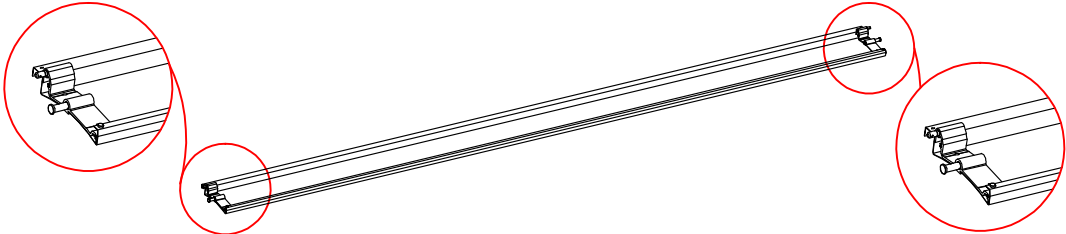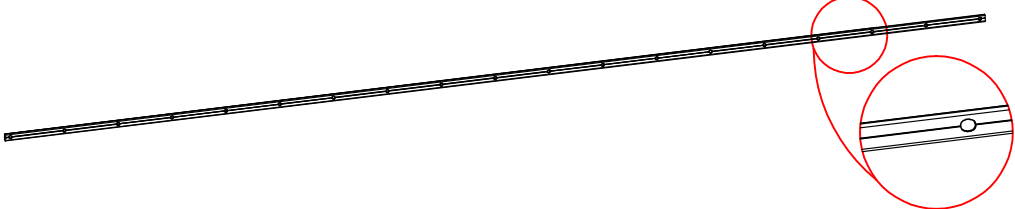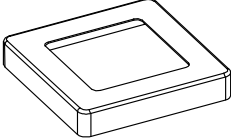REF	PICTURE	QTY
B3		1PC
C		2PCS
D		38PCS
E		2PCS
G		4PCS
H		2PCS
I		3PCS

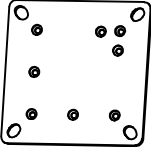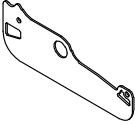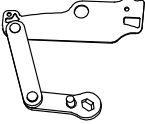REF	PICTURE	QTY
J		3PCS
K		77PCS
L		2PCS
M		79PCS
N		4PCS
N1		2PCS
O		20PCS

REF	PICTURE	QTY
(P)	 M5x12mm	160PCS
(Q)	 4.2x25mm	160PCS
(R)	 5.5x19mm	24PCS
(S)		87PCS
(T ₁)		4PCS
(T ₂)		32PCS
(U ₁)	 M8x45mm	4PCS

REF	PICTURE	QTY
(U ₂)		2PCS
(U ₃)		1PC
(V)		2PCS
(W)		22PCS
(X)		1PC
(Y)		2PCS
(Z ₃)		1PC
(Z)		1PC


Warning

In snow season or in case of snow forecast open up your shutters in vertical position to avoid any damaging on your pergola.

What you need?



Glove




Knife




Hammer




Safety hat

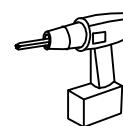

Electric screw driver

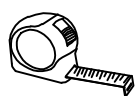

Tapeline

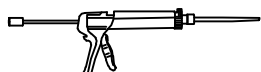

Glue gun



Ladder




Level bar




Adjusting wrench


1

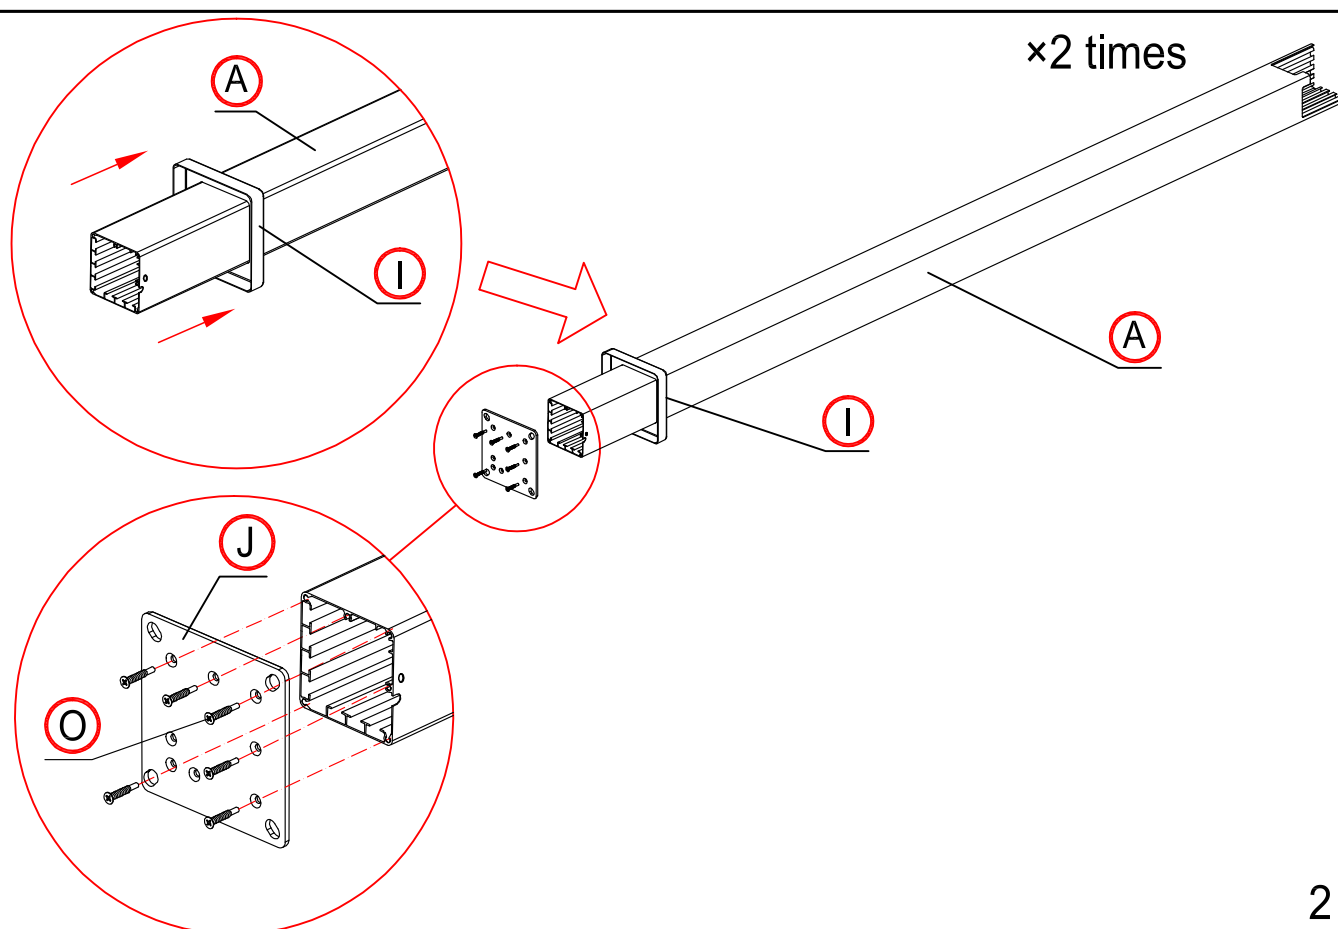

2








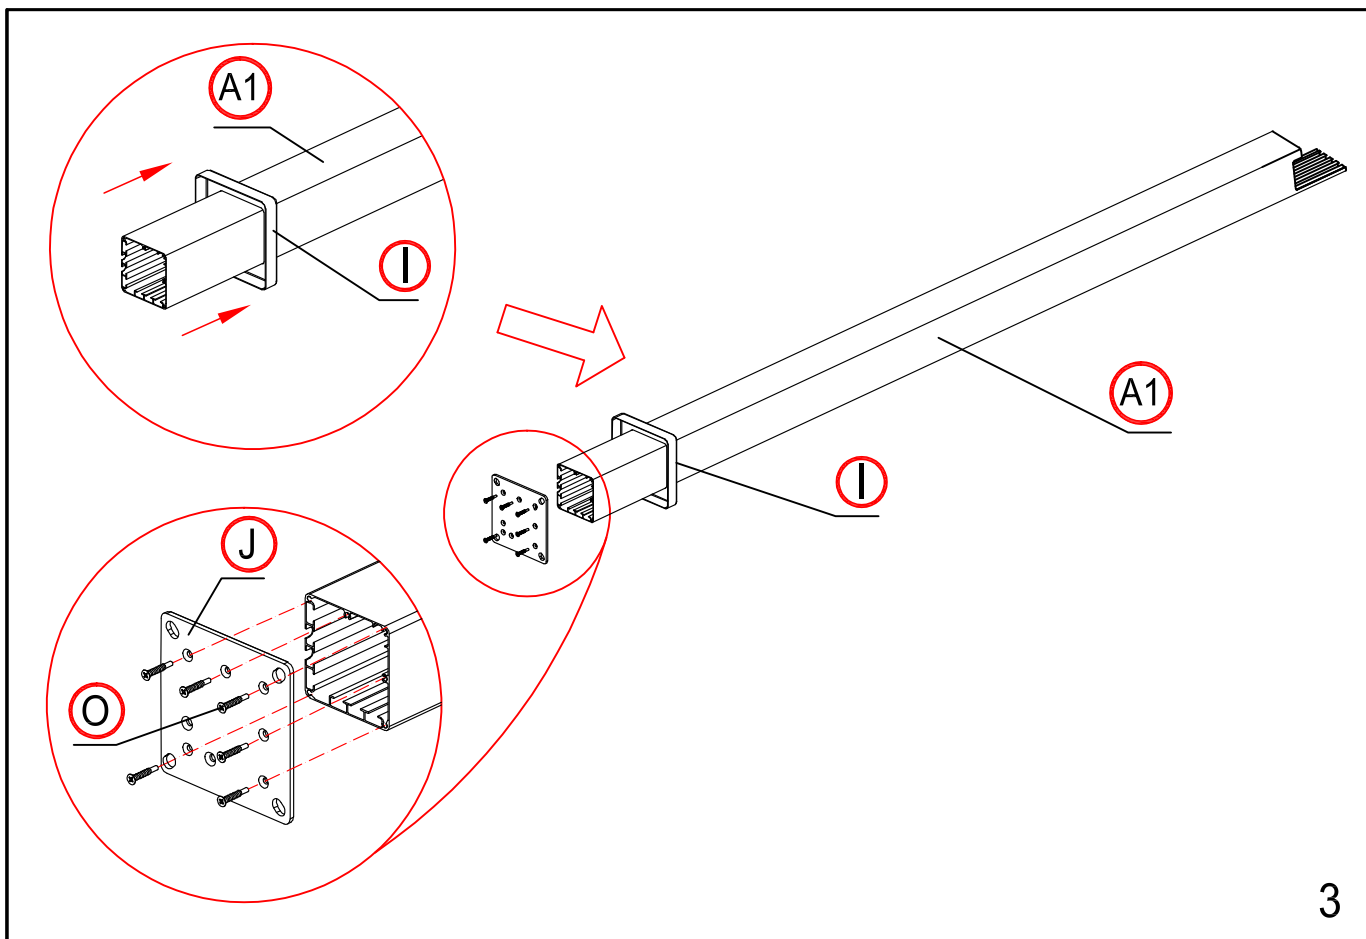



3

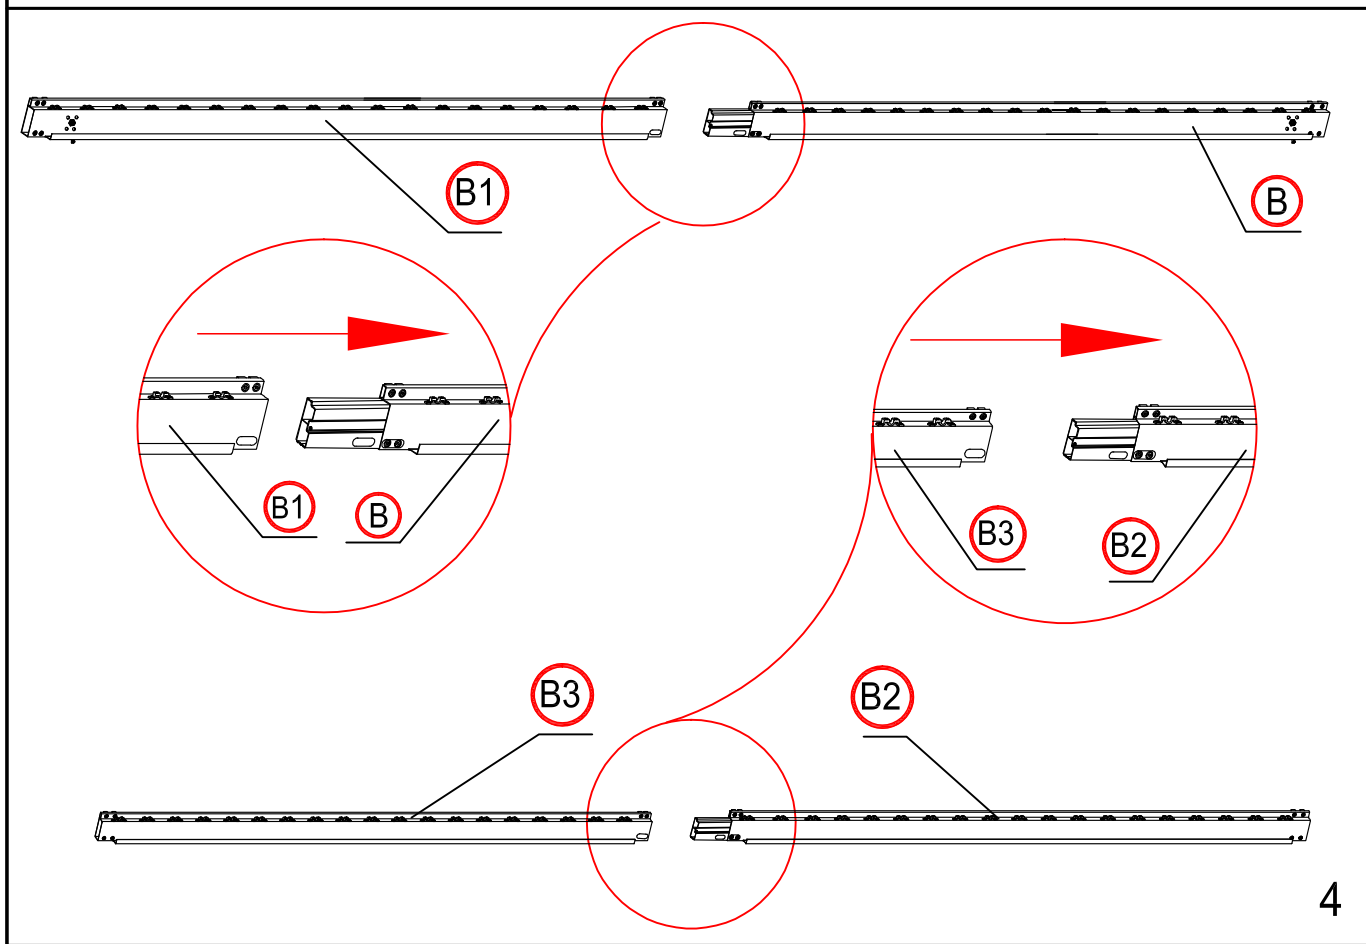


4


6

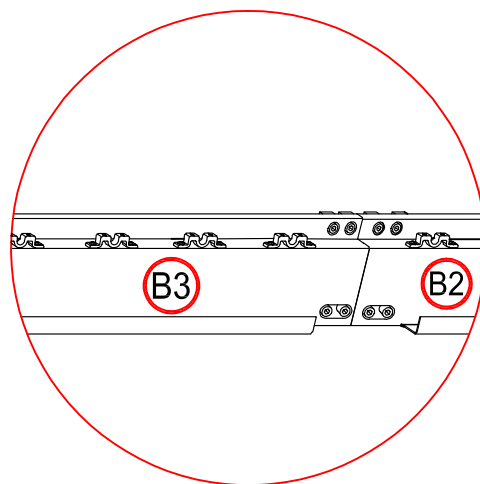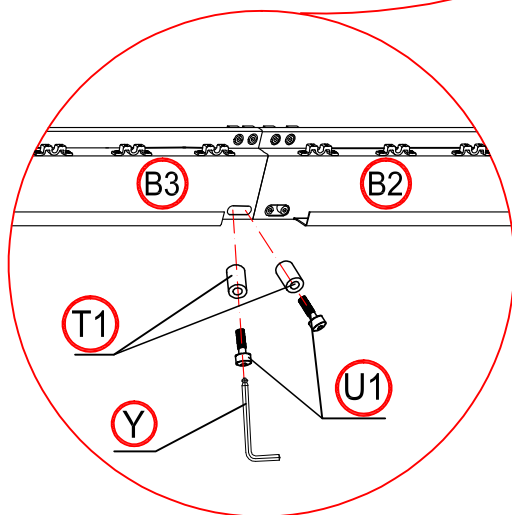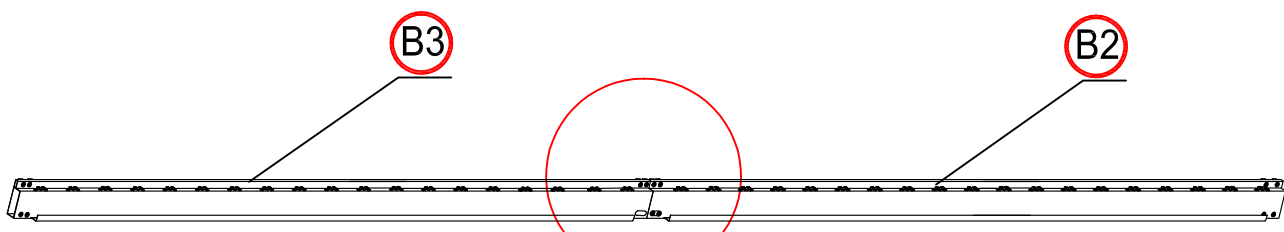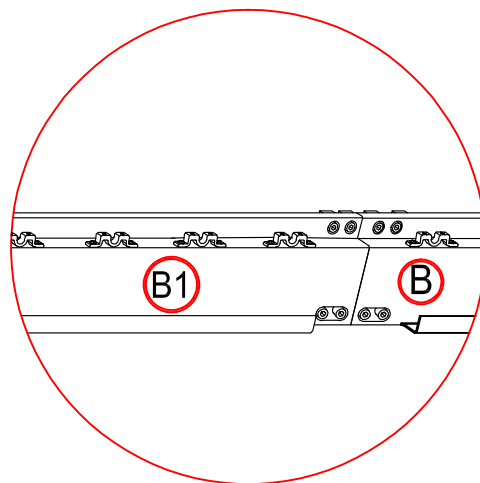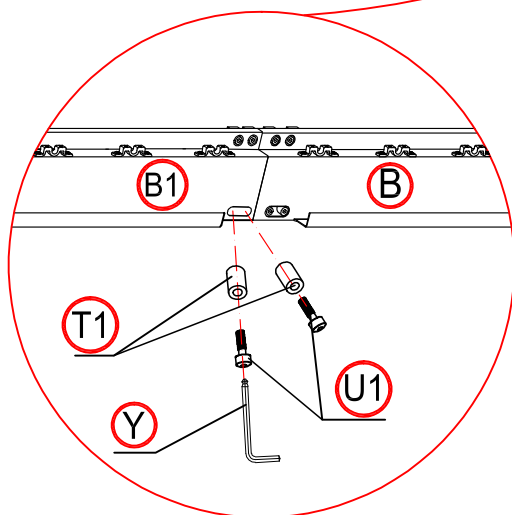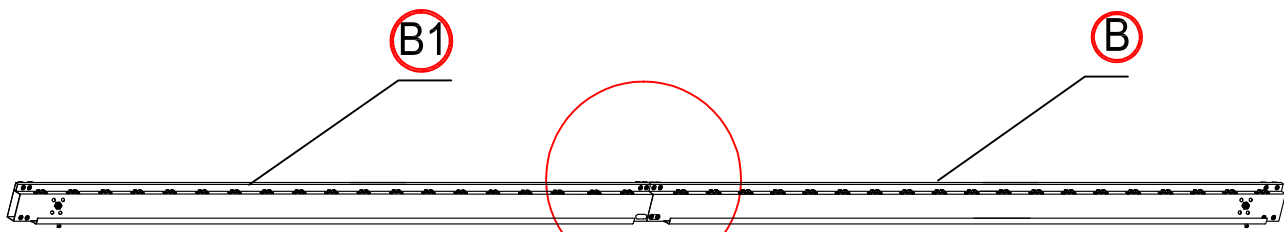

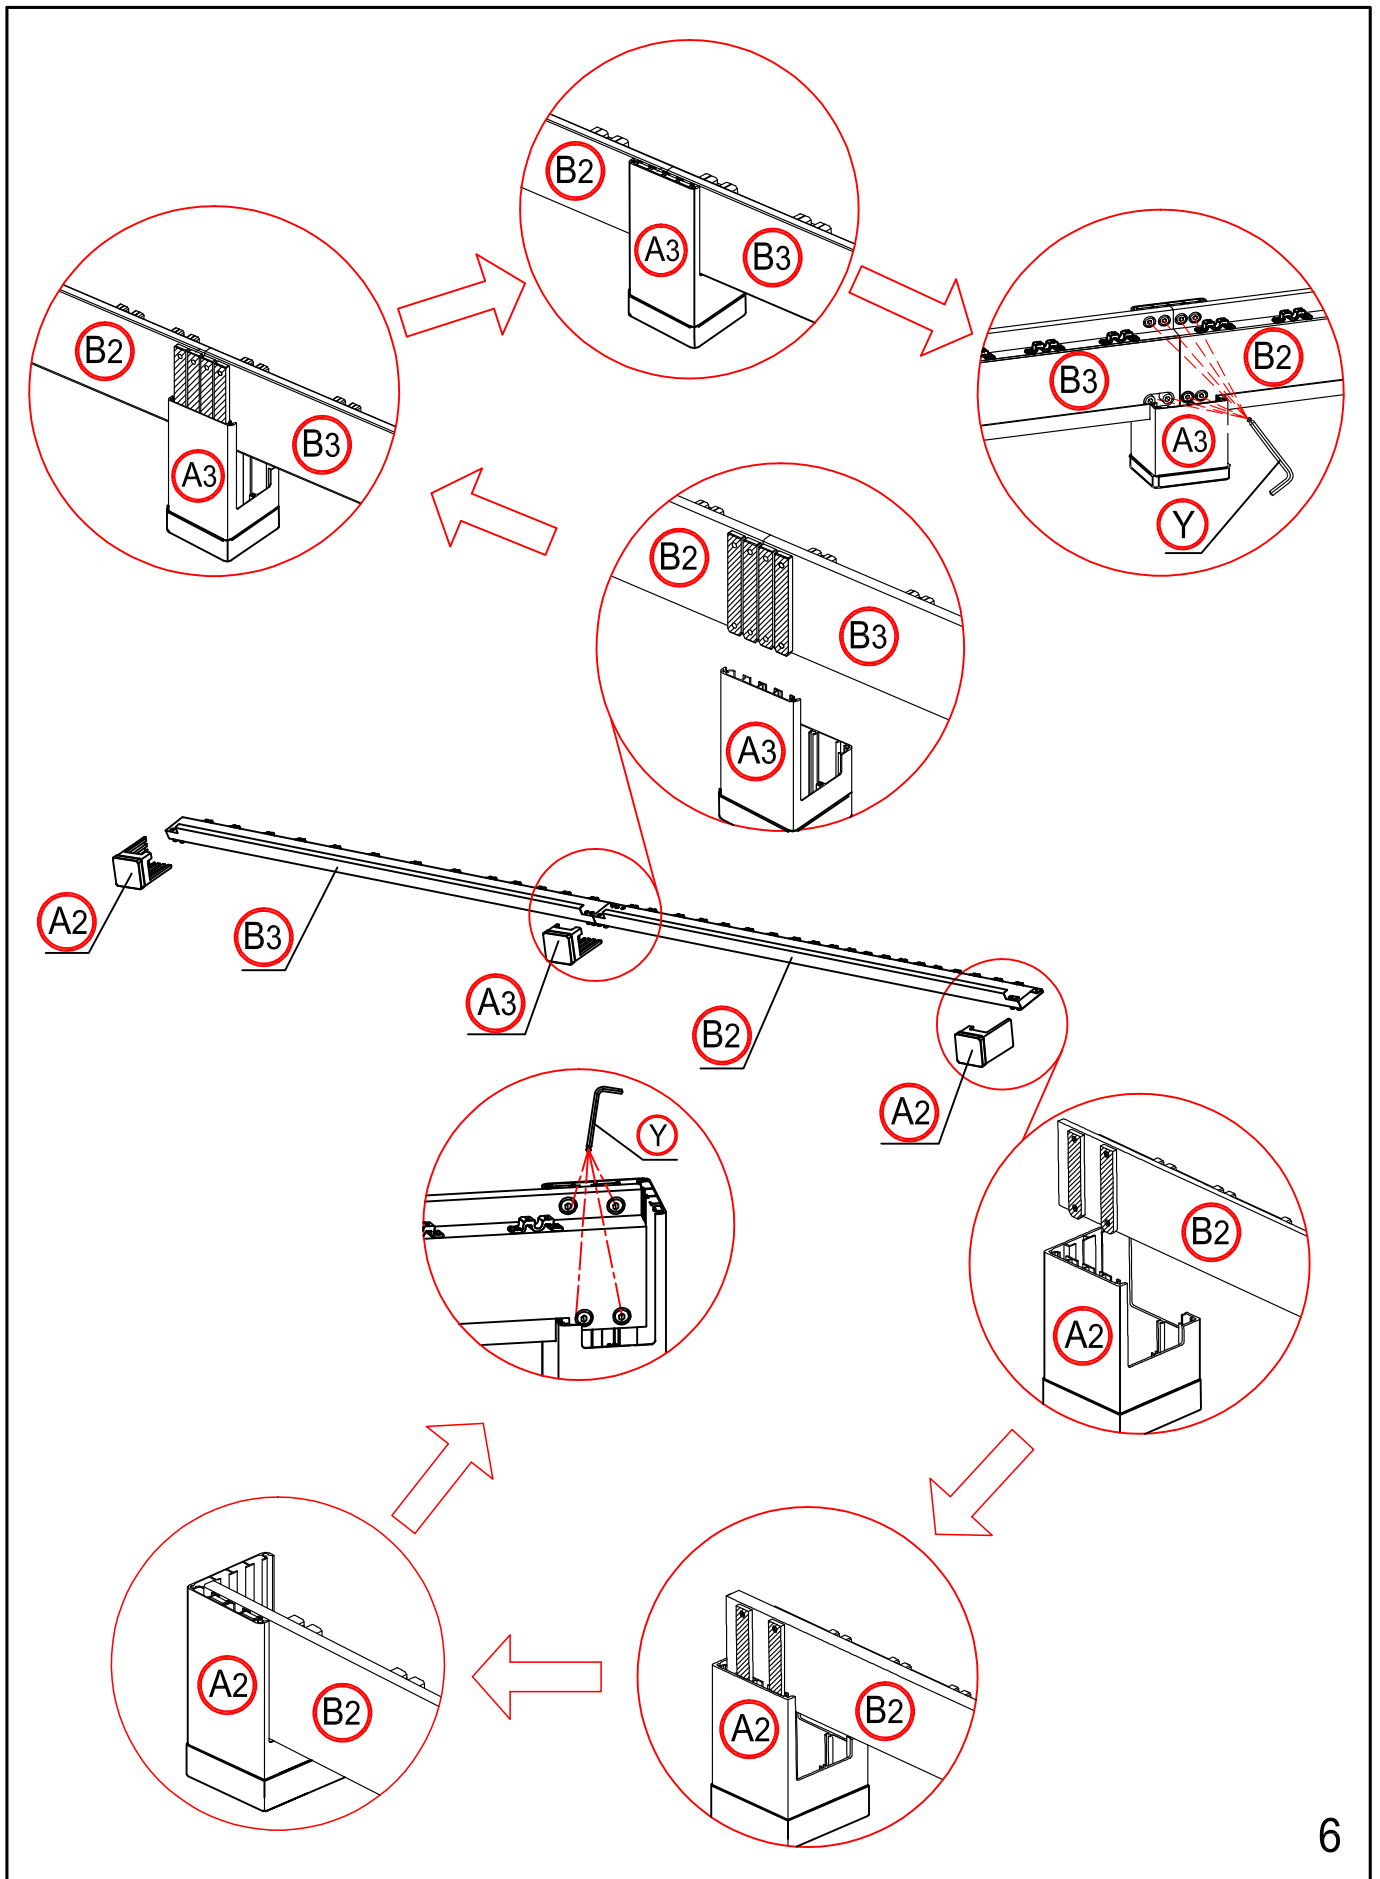


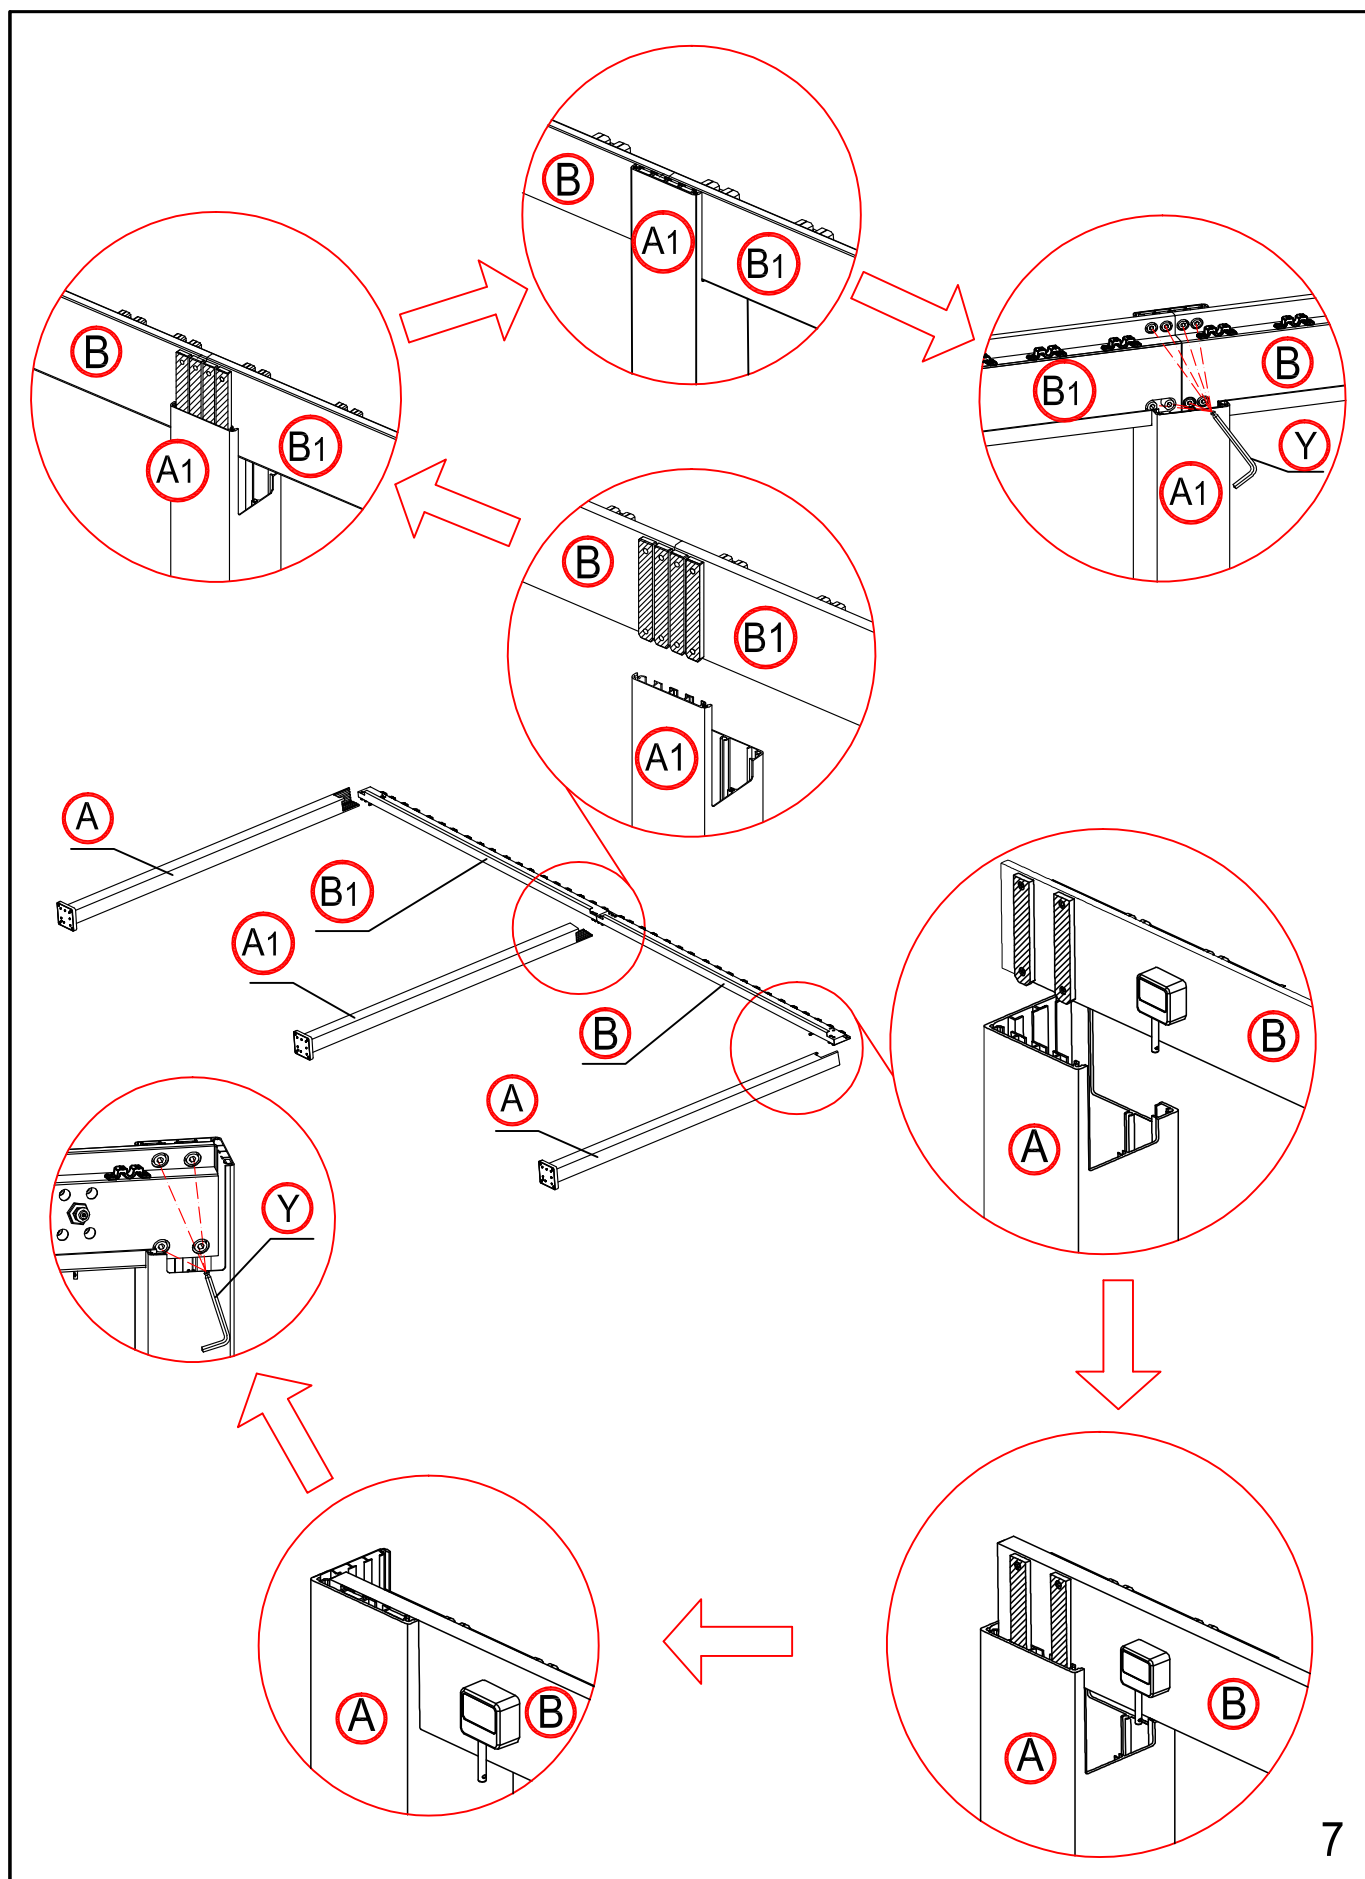


×28 times

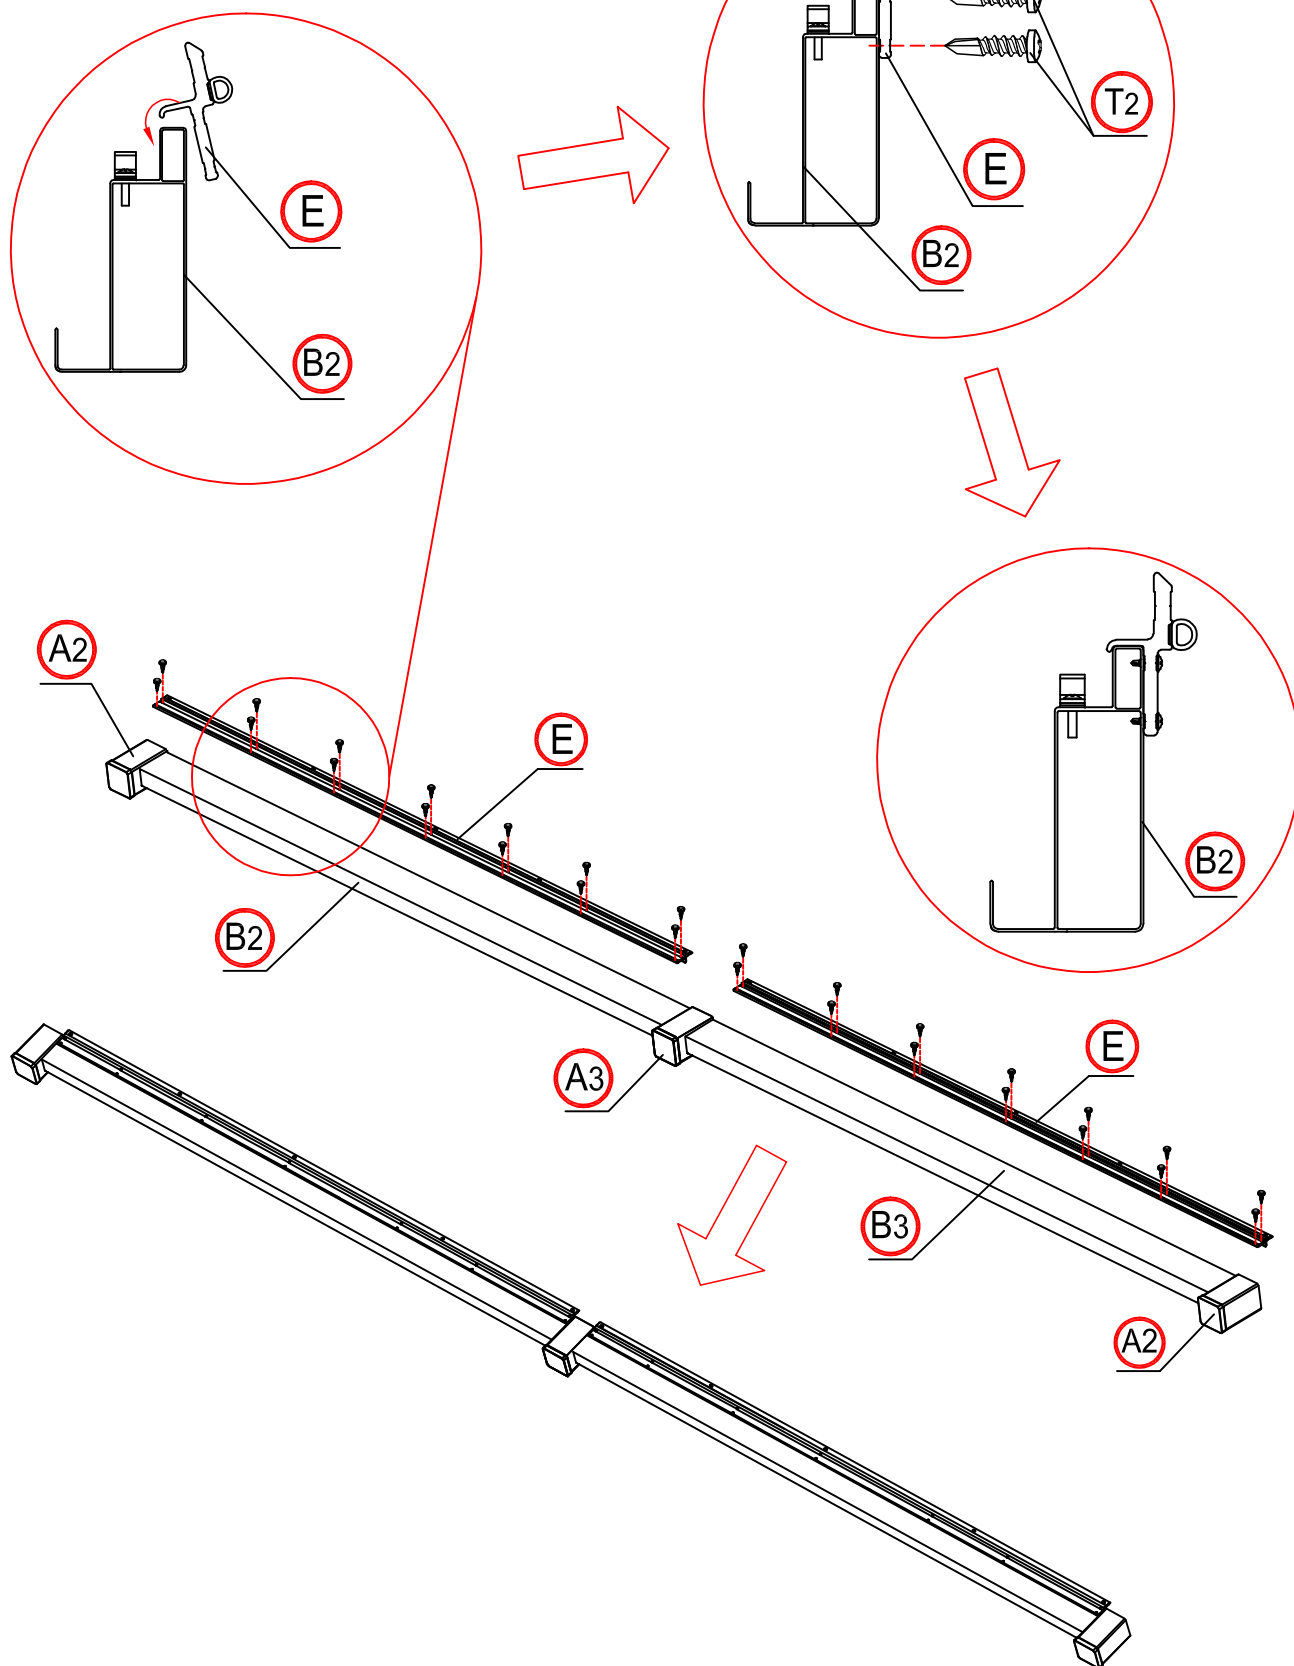


Use a level gauge to measure the ground to ensure it is at the same level as the ground.

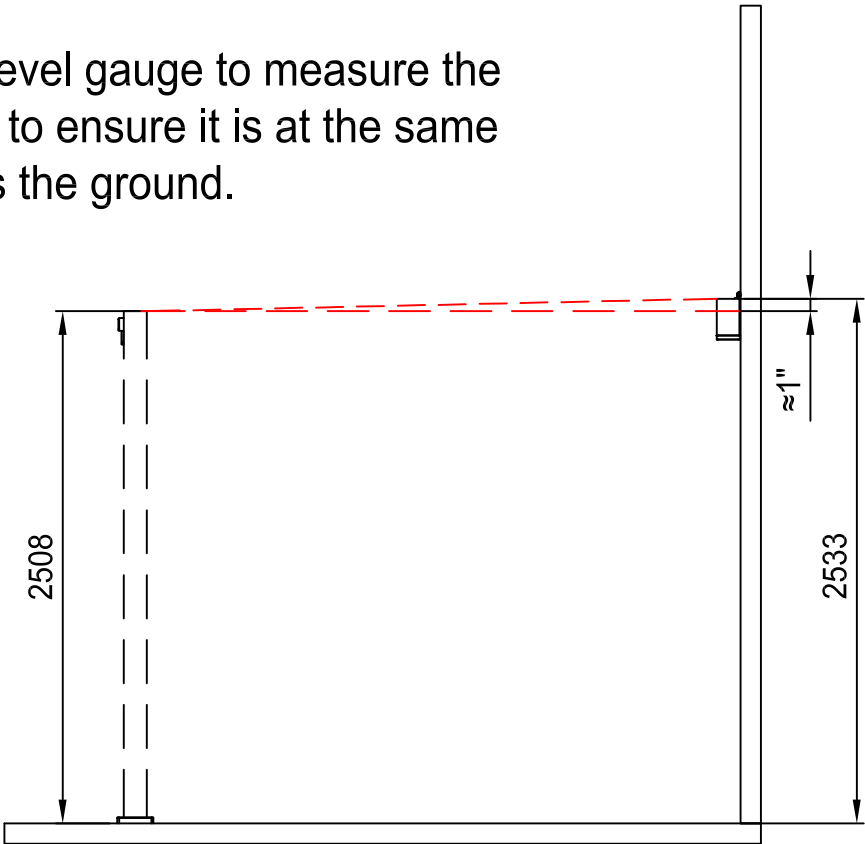


Actually, the horizon pole on the side of the wall is about an inch higher than the height of the opposite one to facilitate the flow of water from high to low when it rains.







×10 times

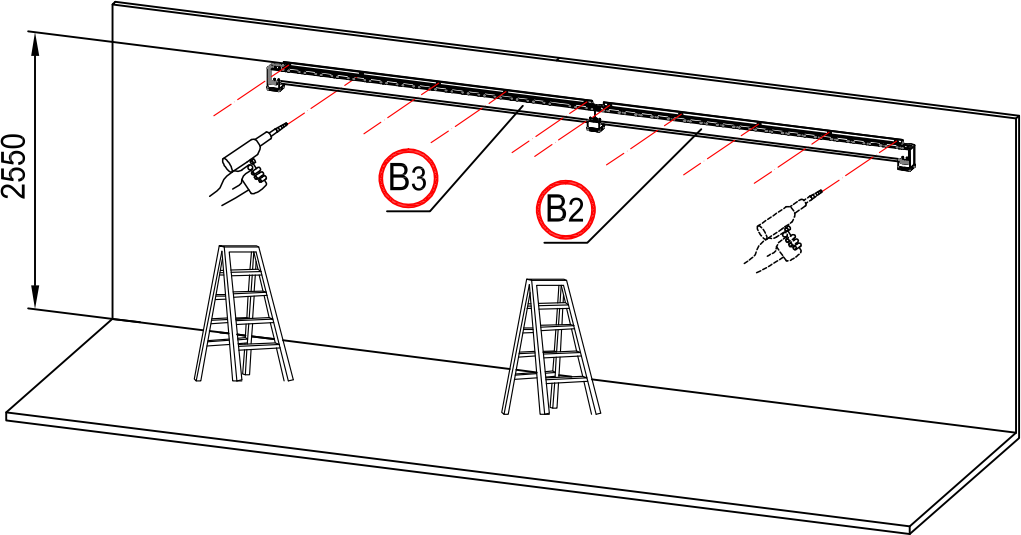

×10 times

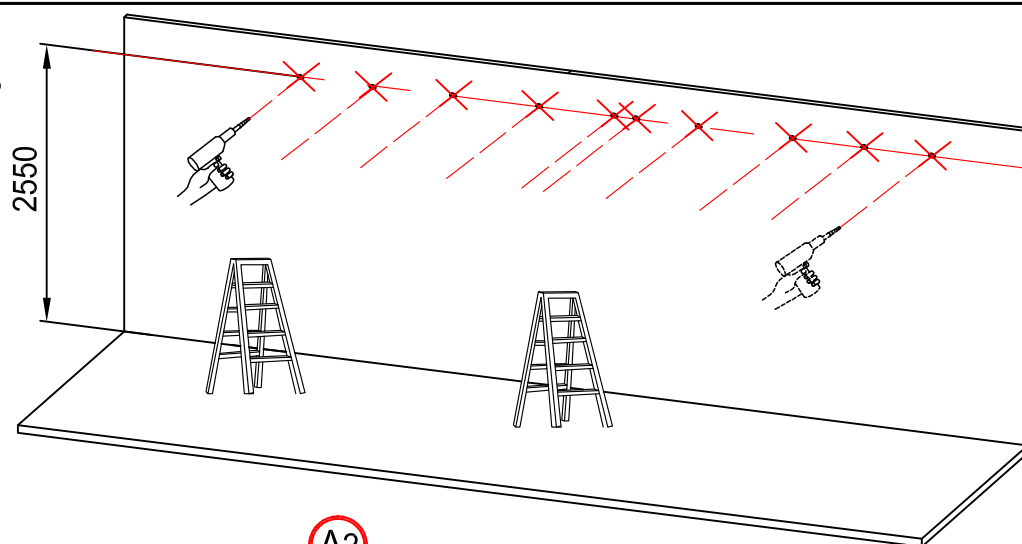



×10 times

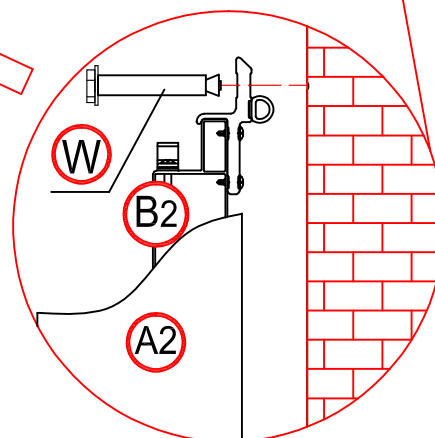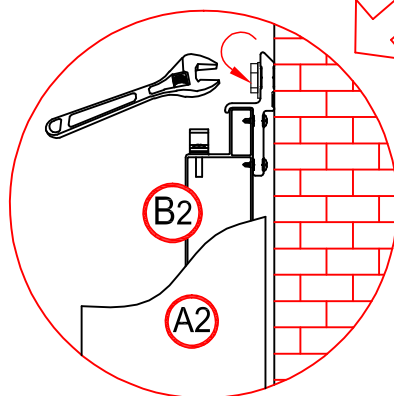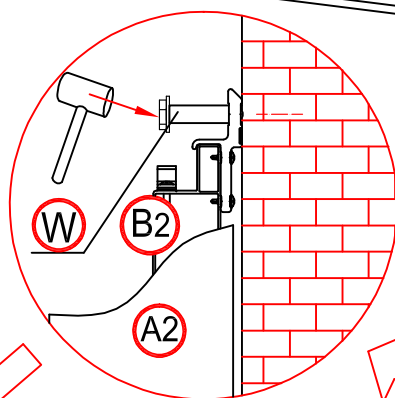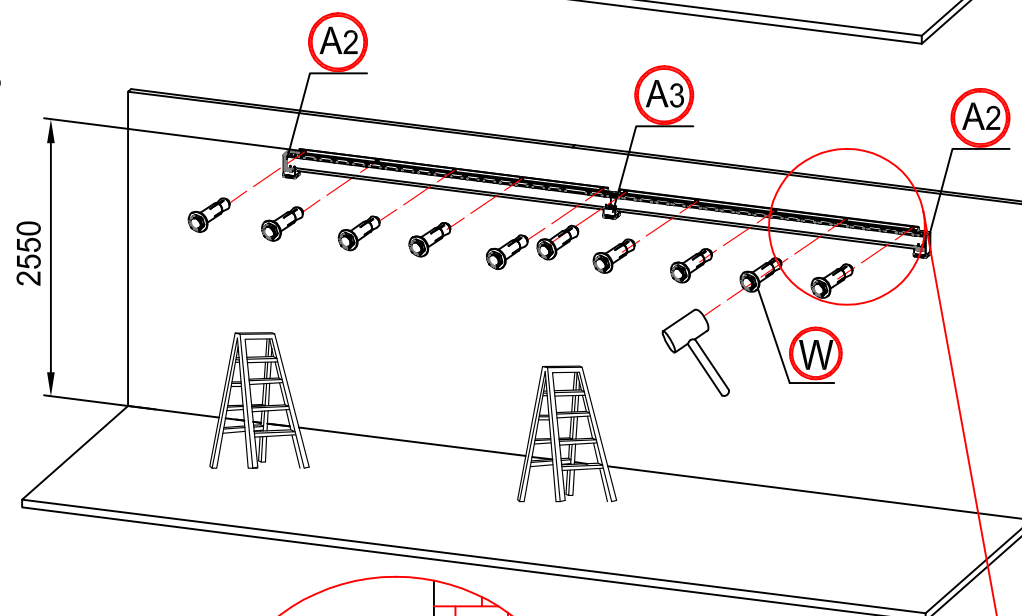









10








If waterproof performance is highly required, please prepare glass glue by yourself and apply onto the contact surface between the beam fixing part and the wall.




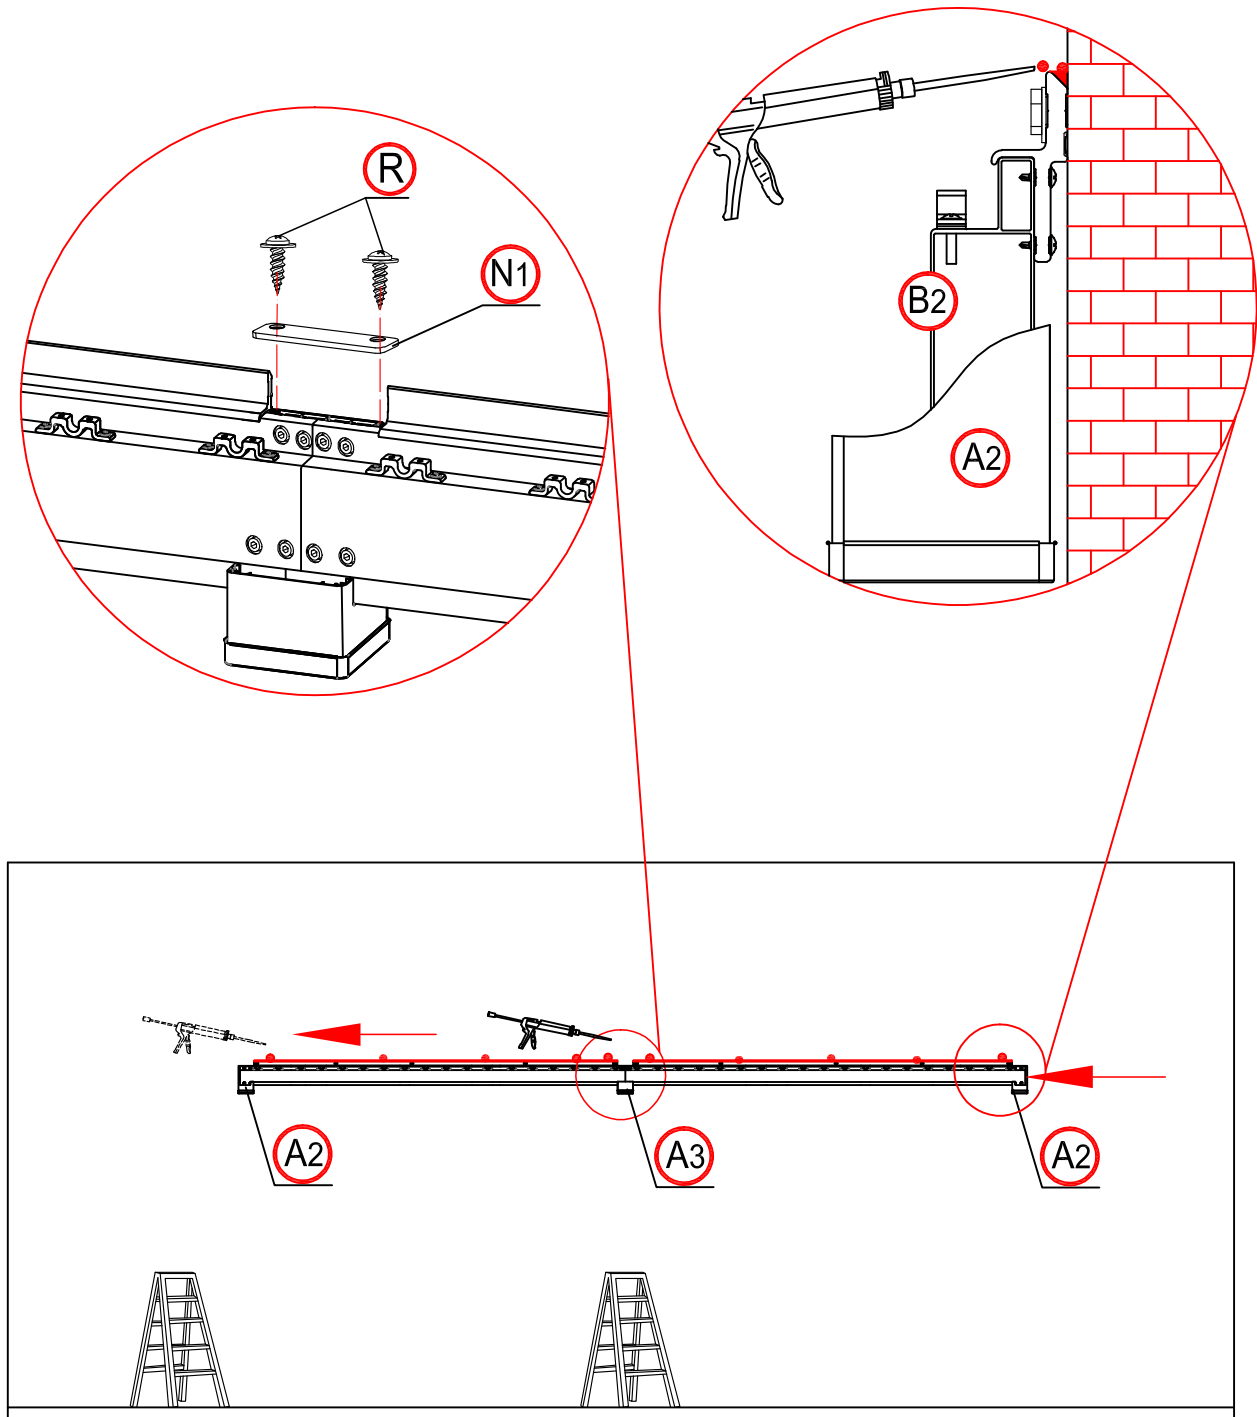


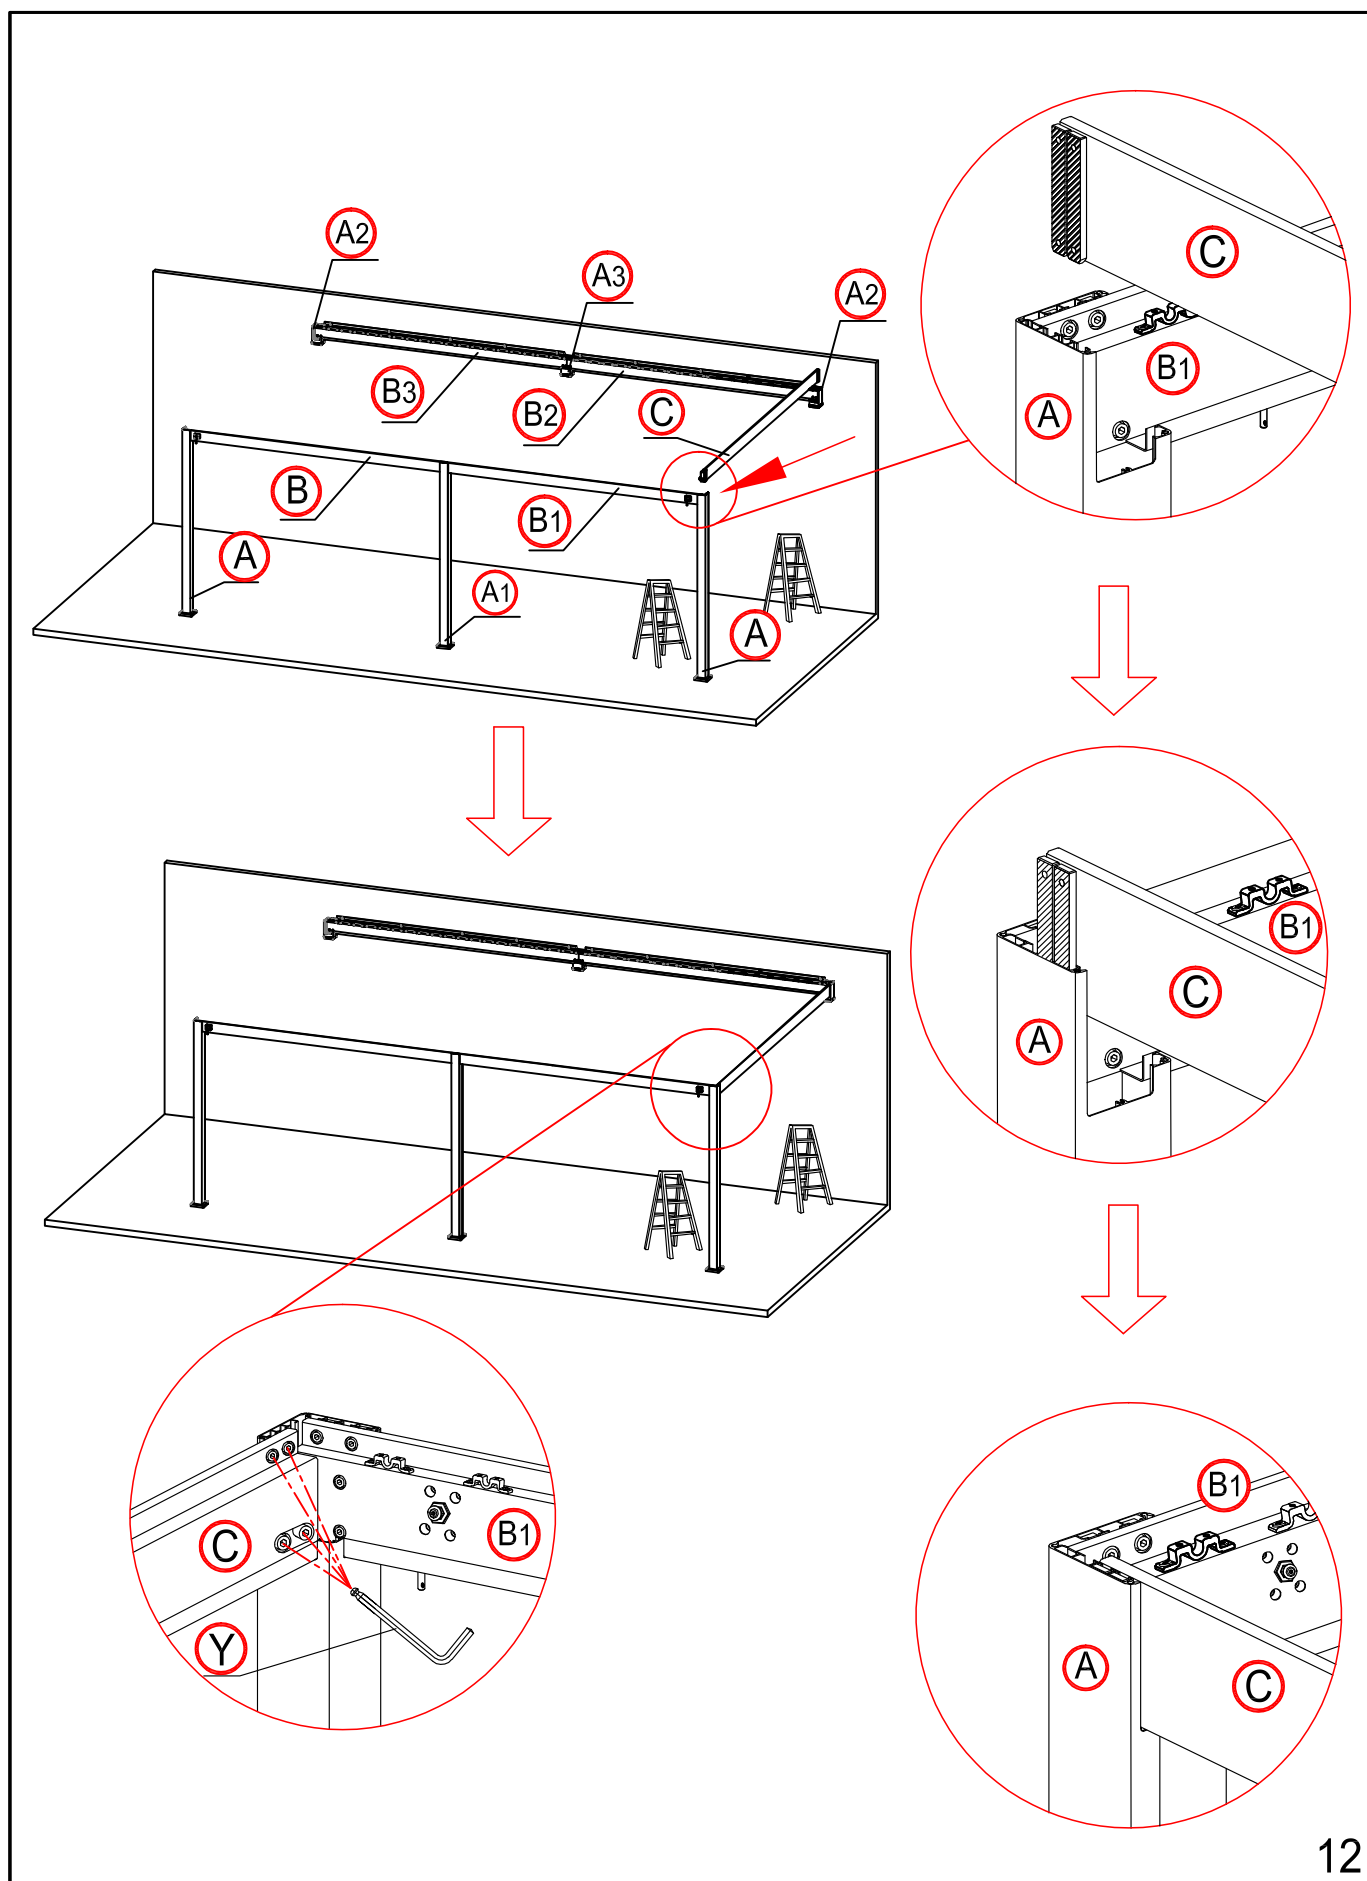




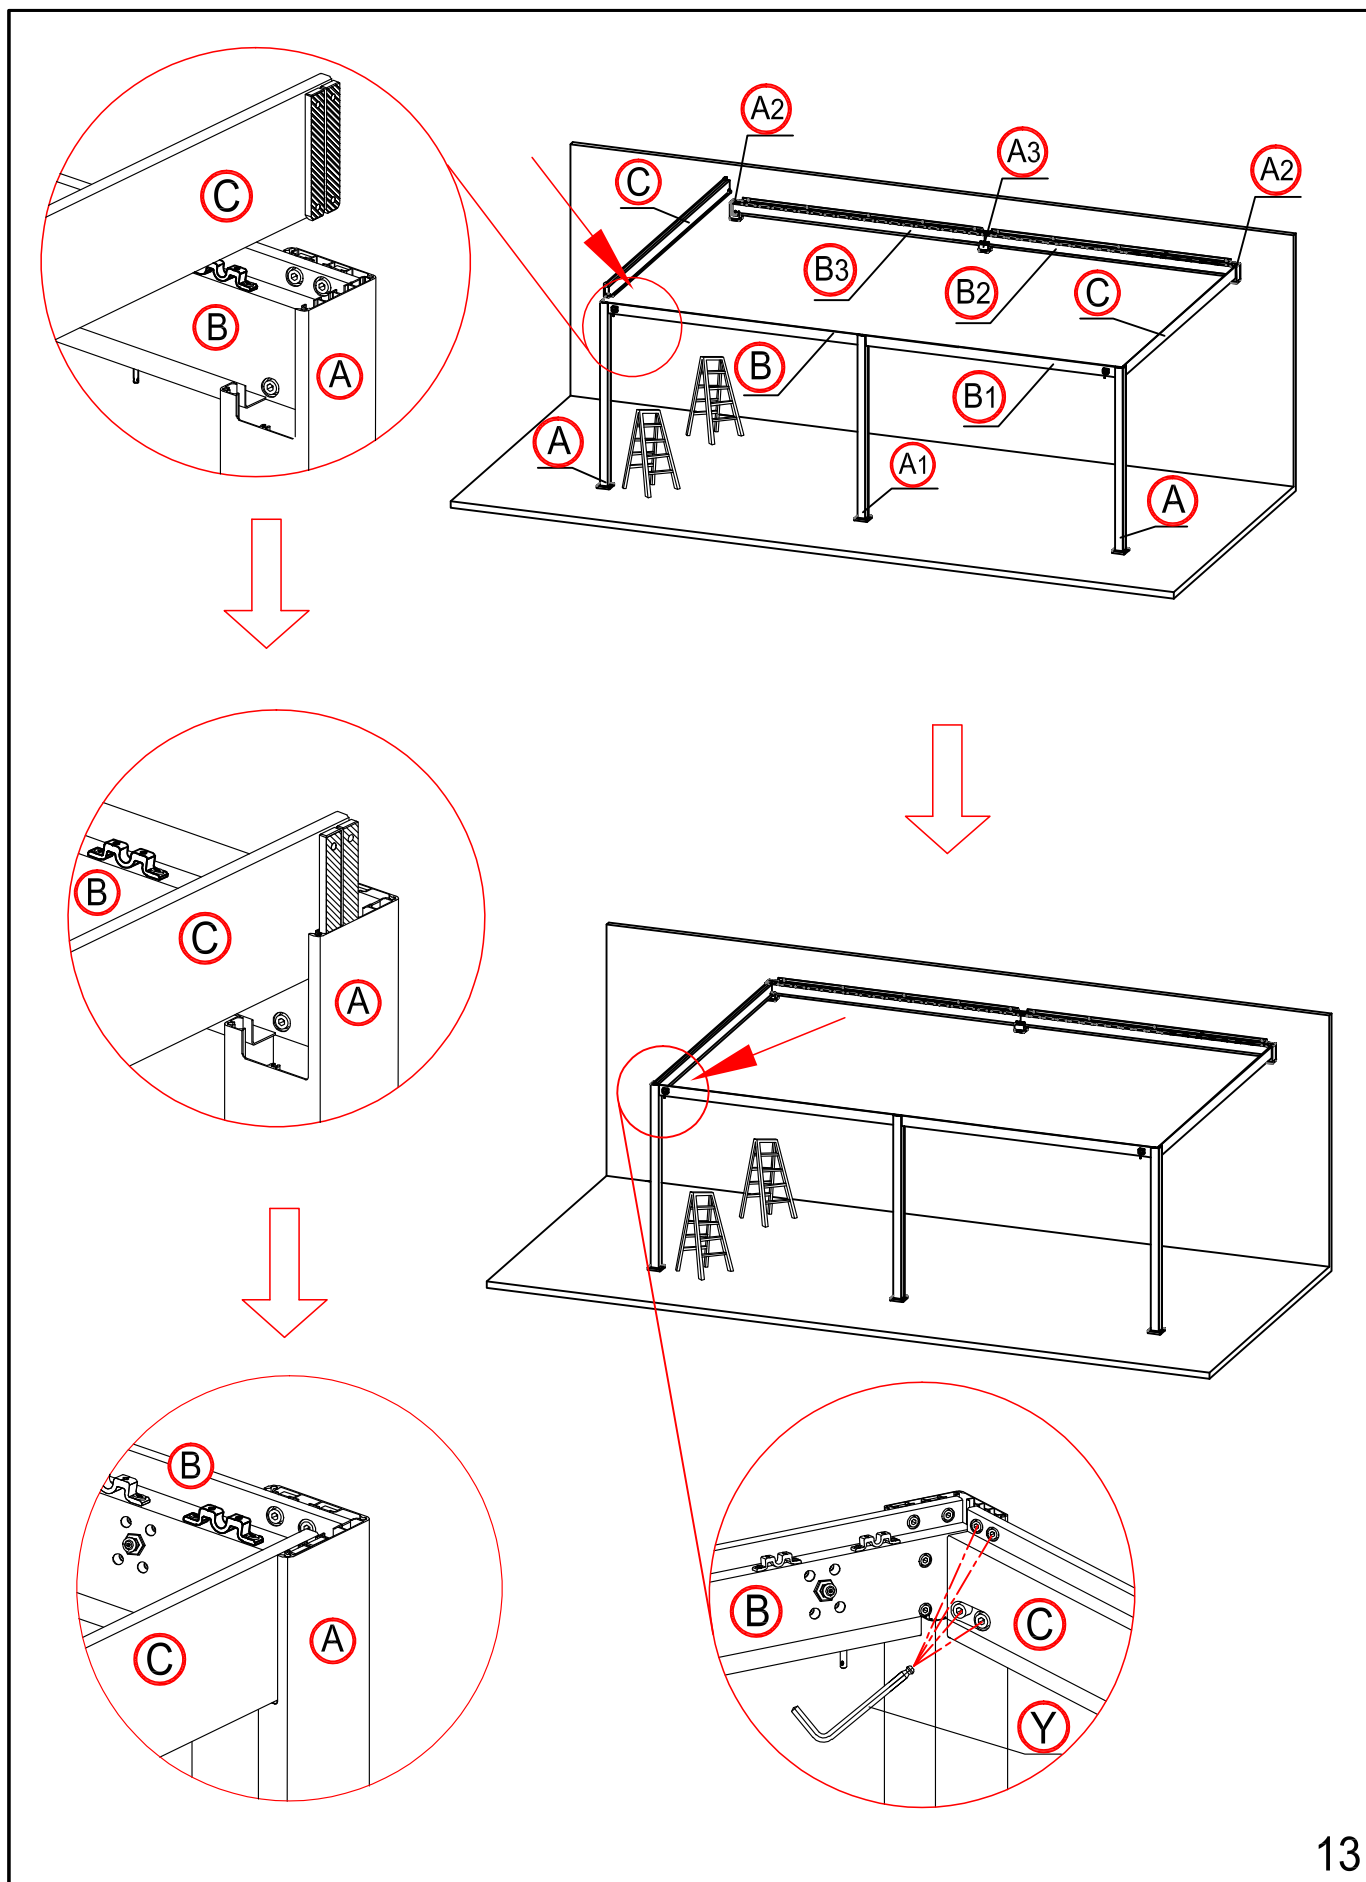


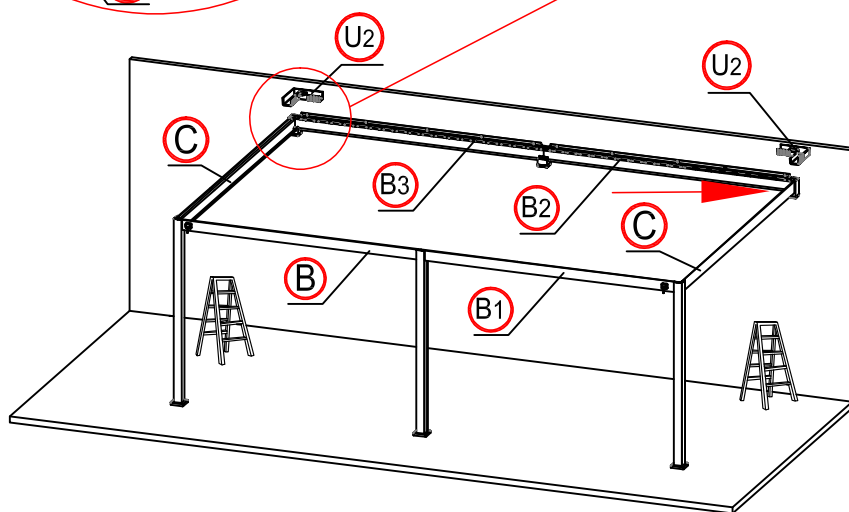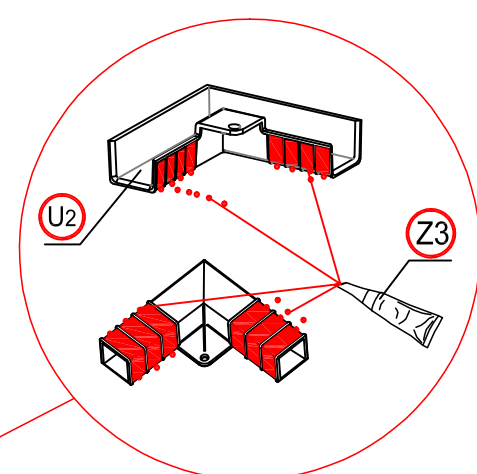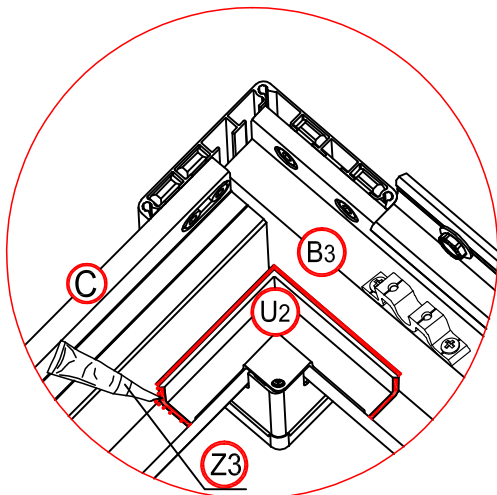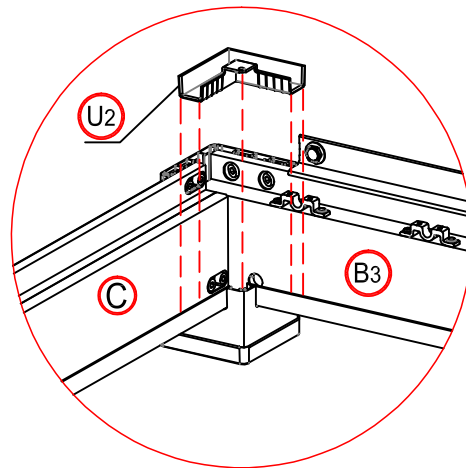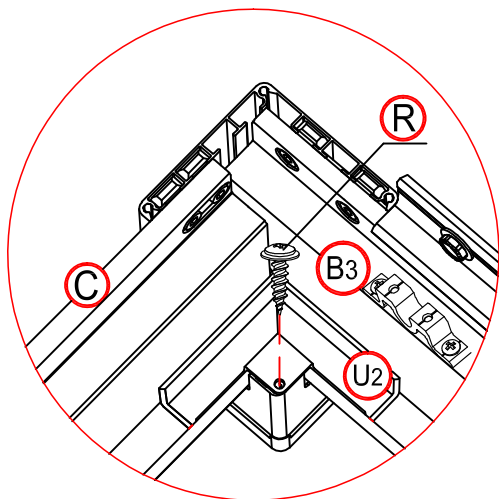

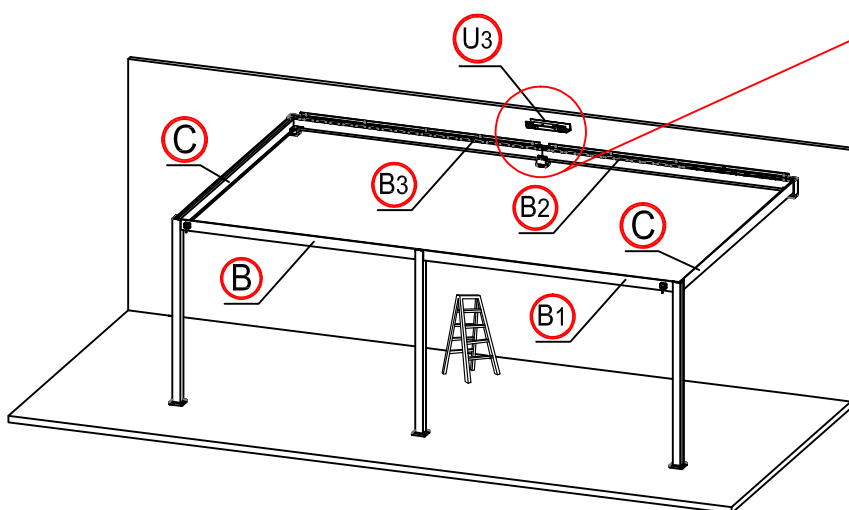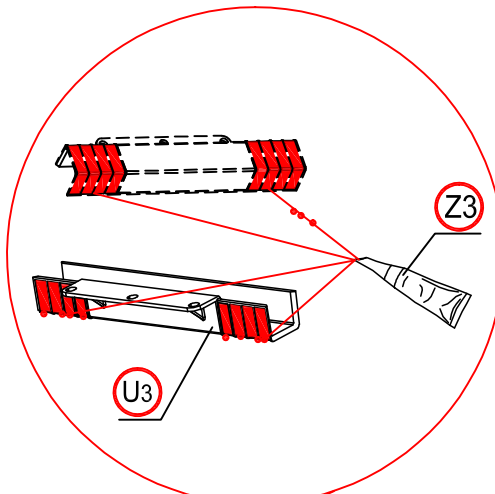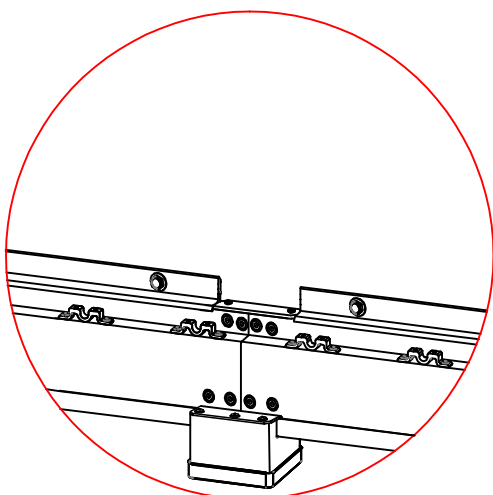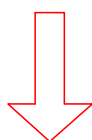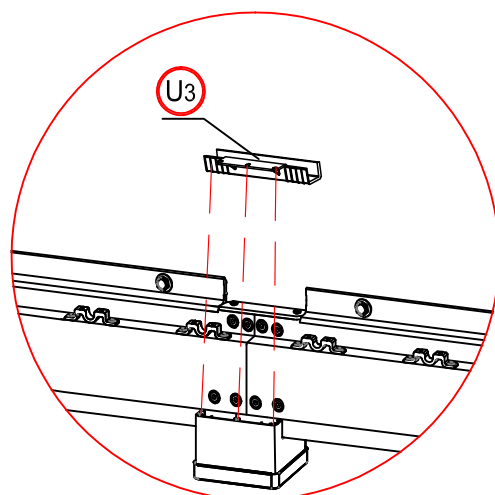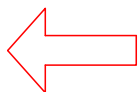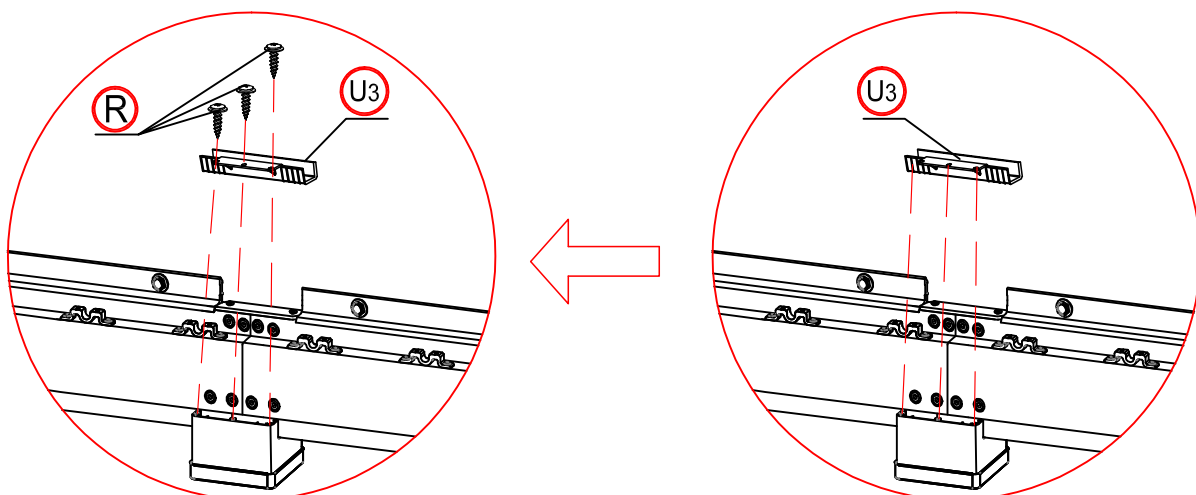


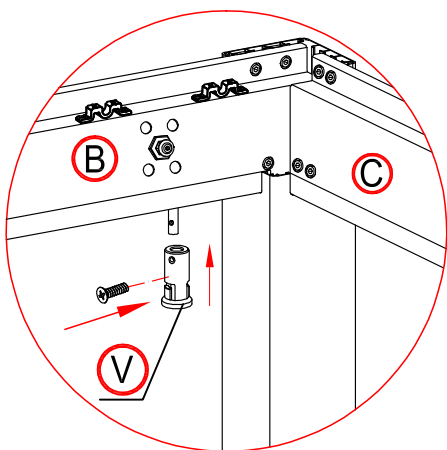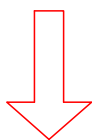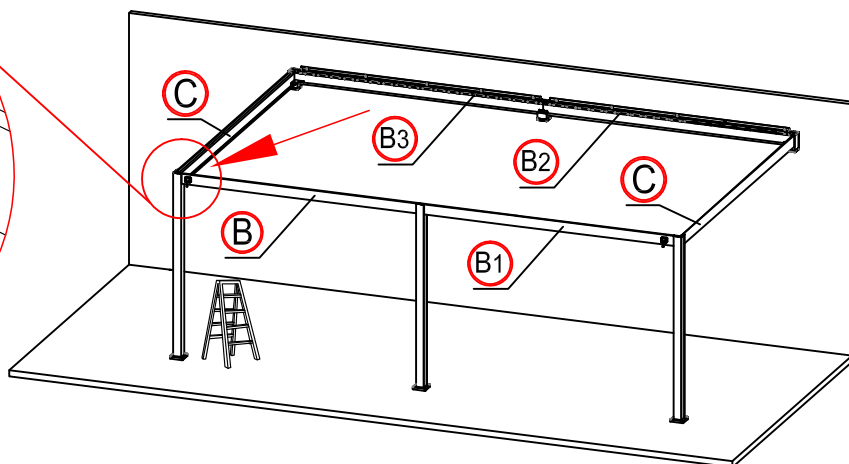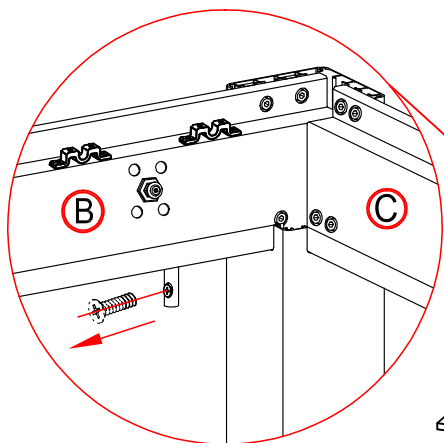










×2 times

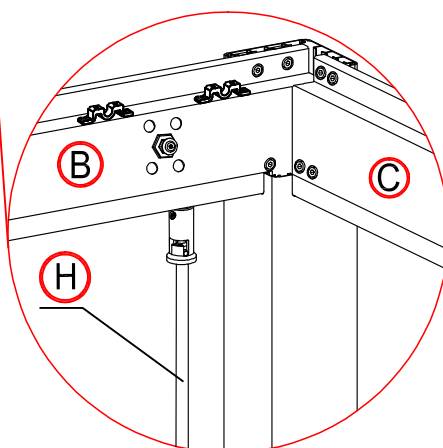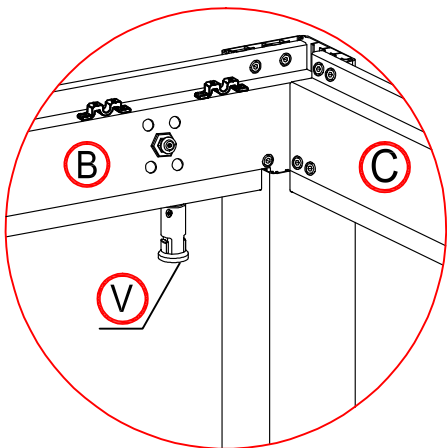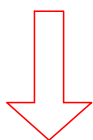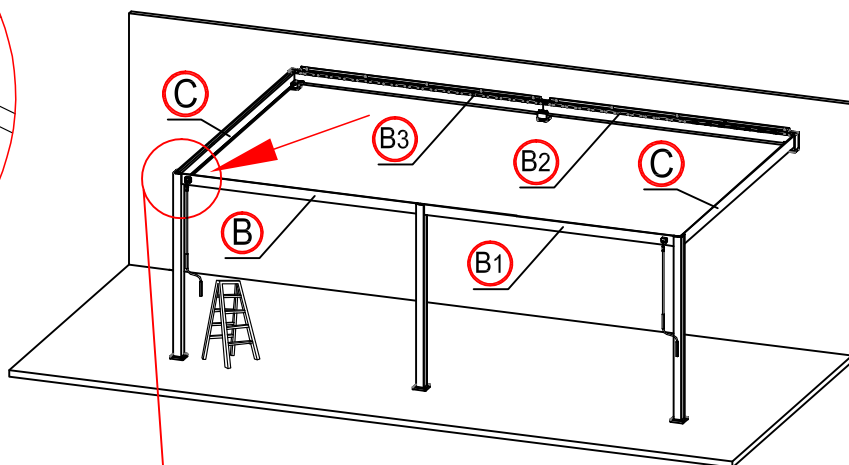


×2 times






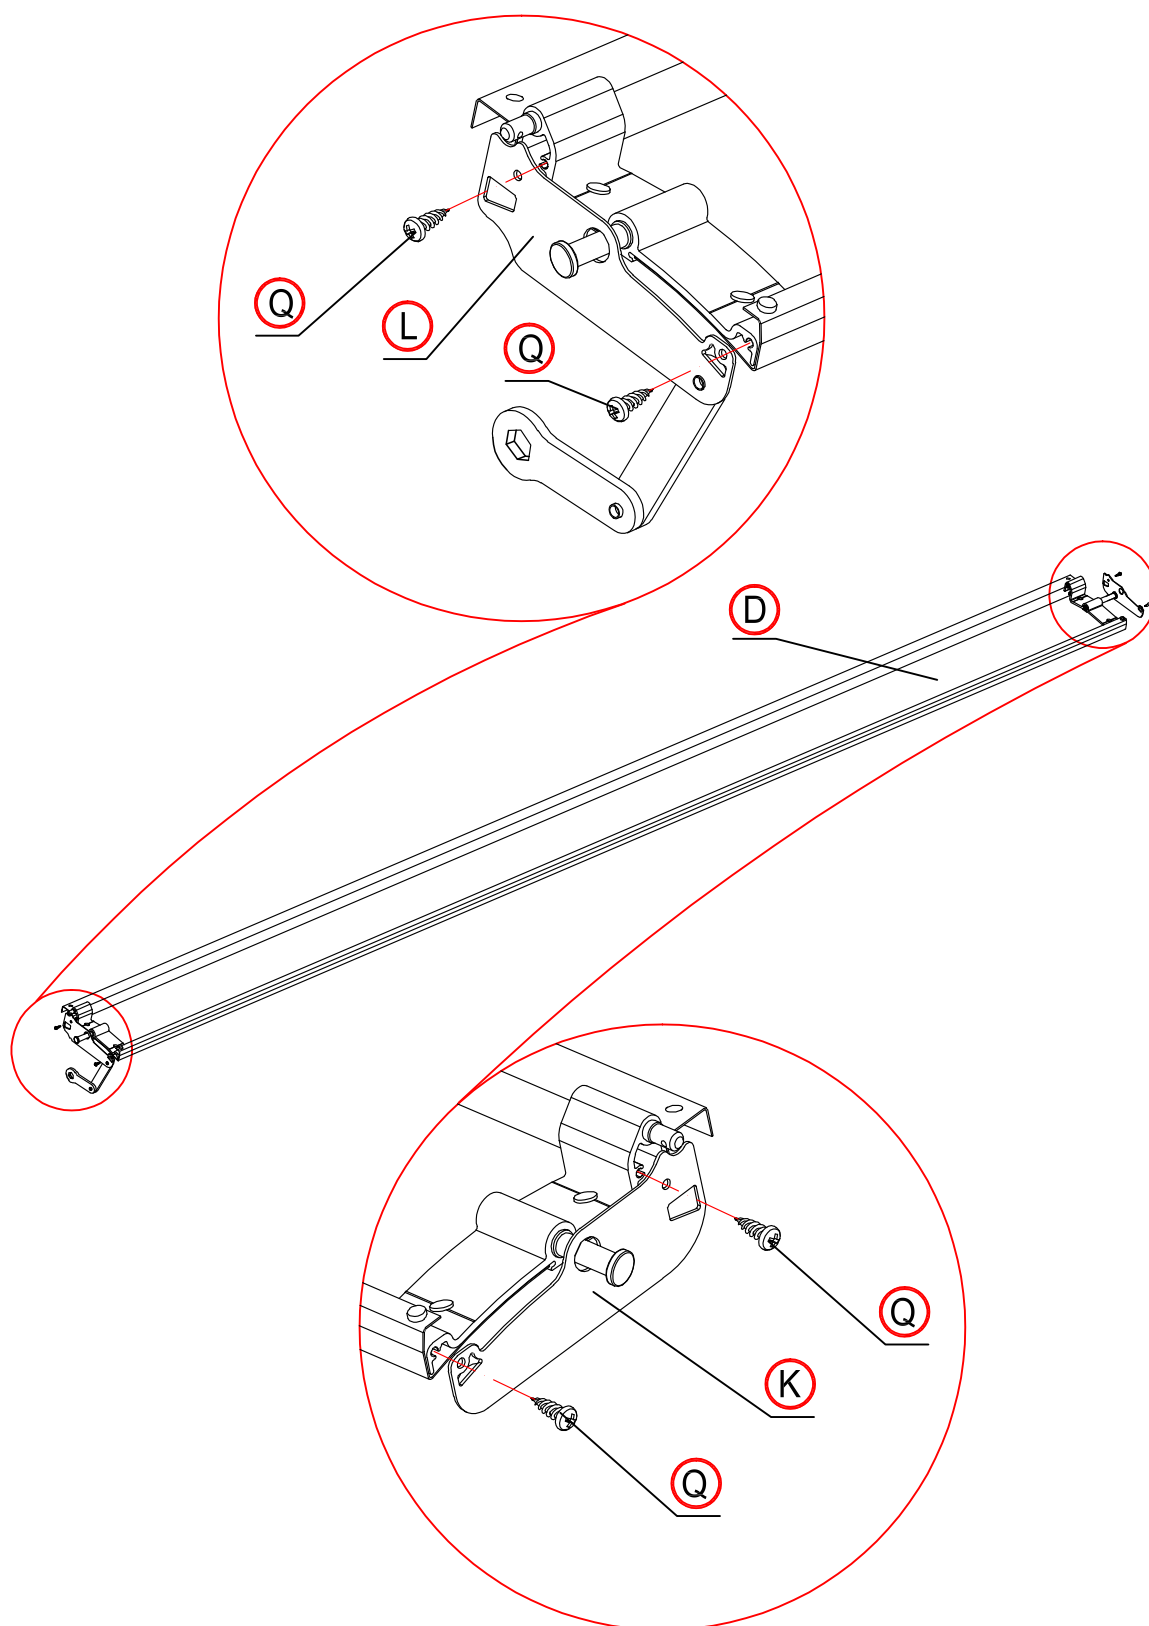









Assemble the second slice to the left.

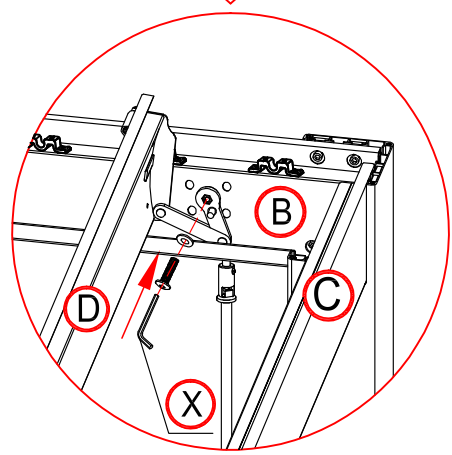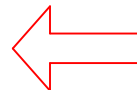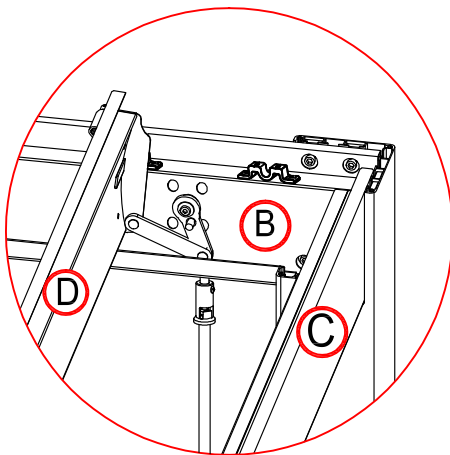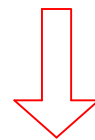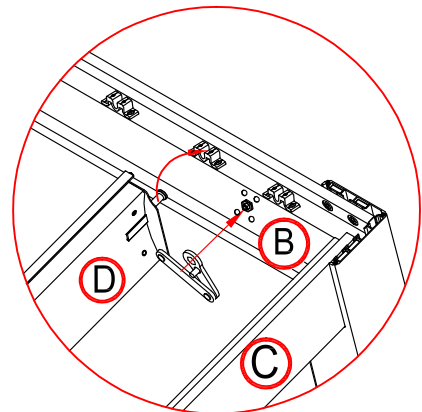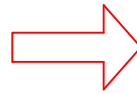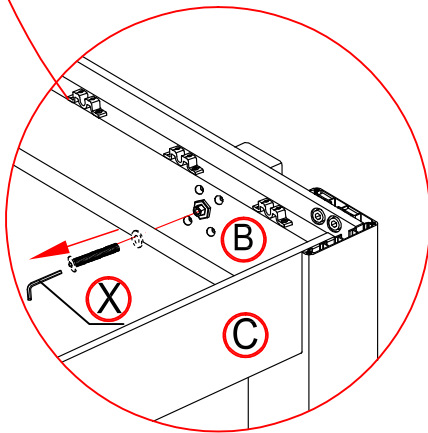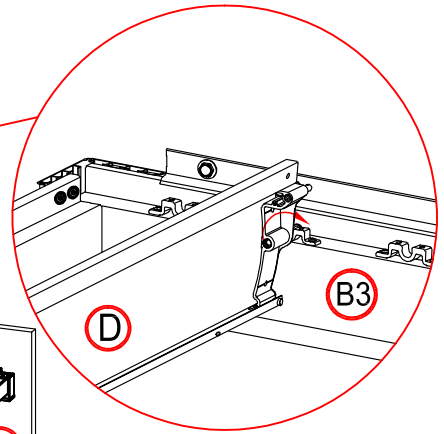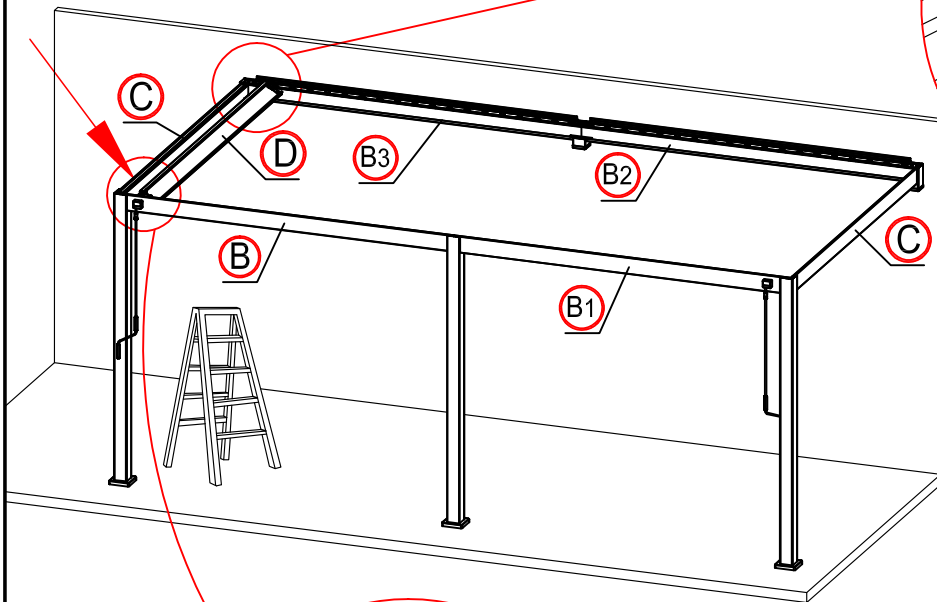

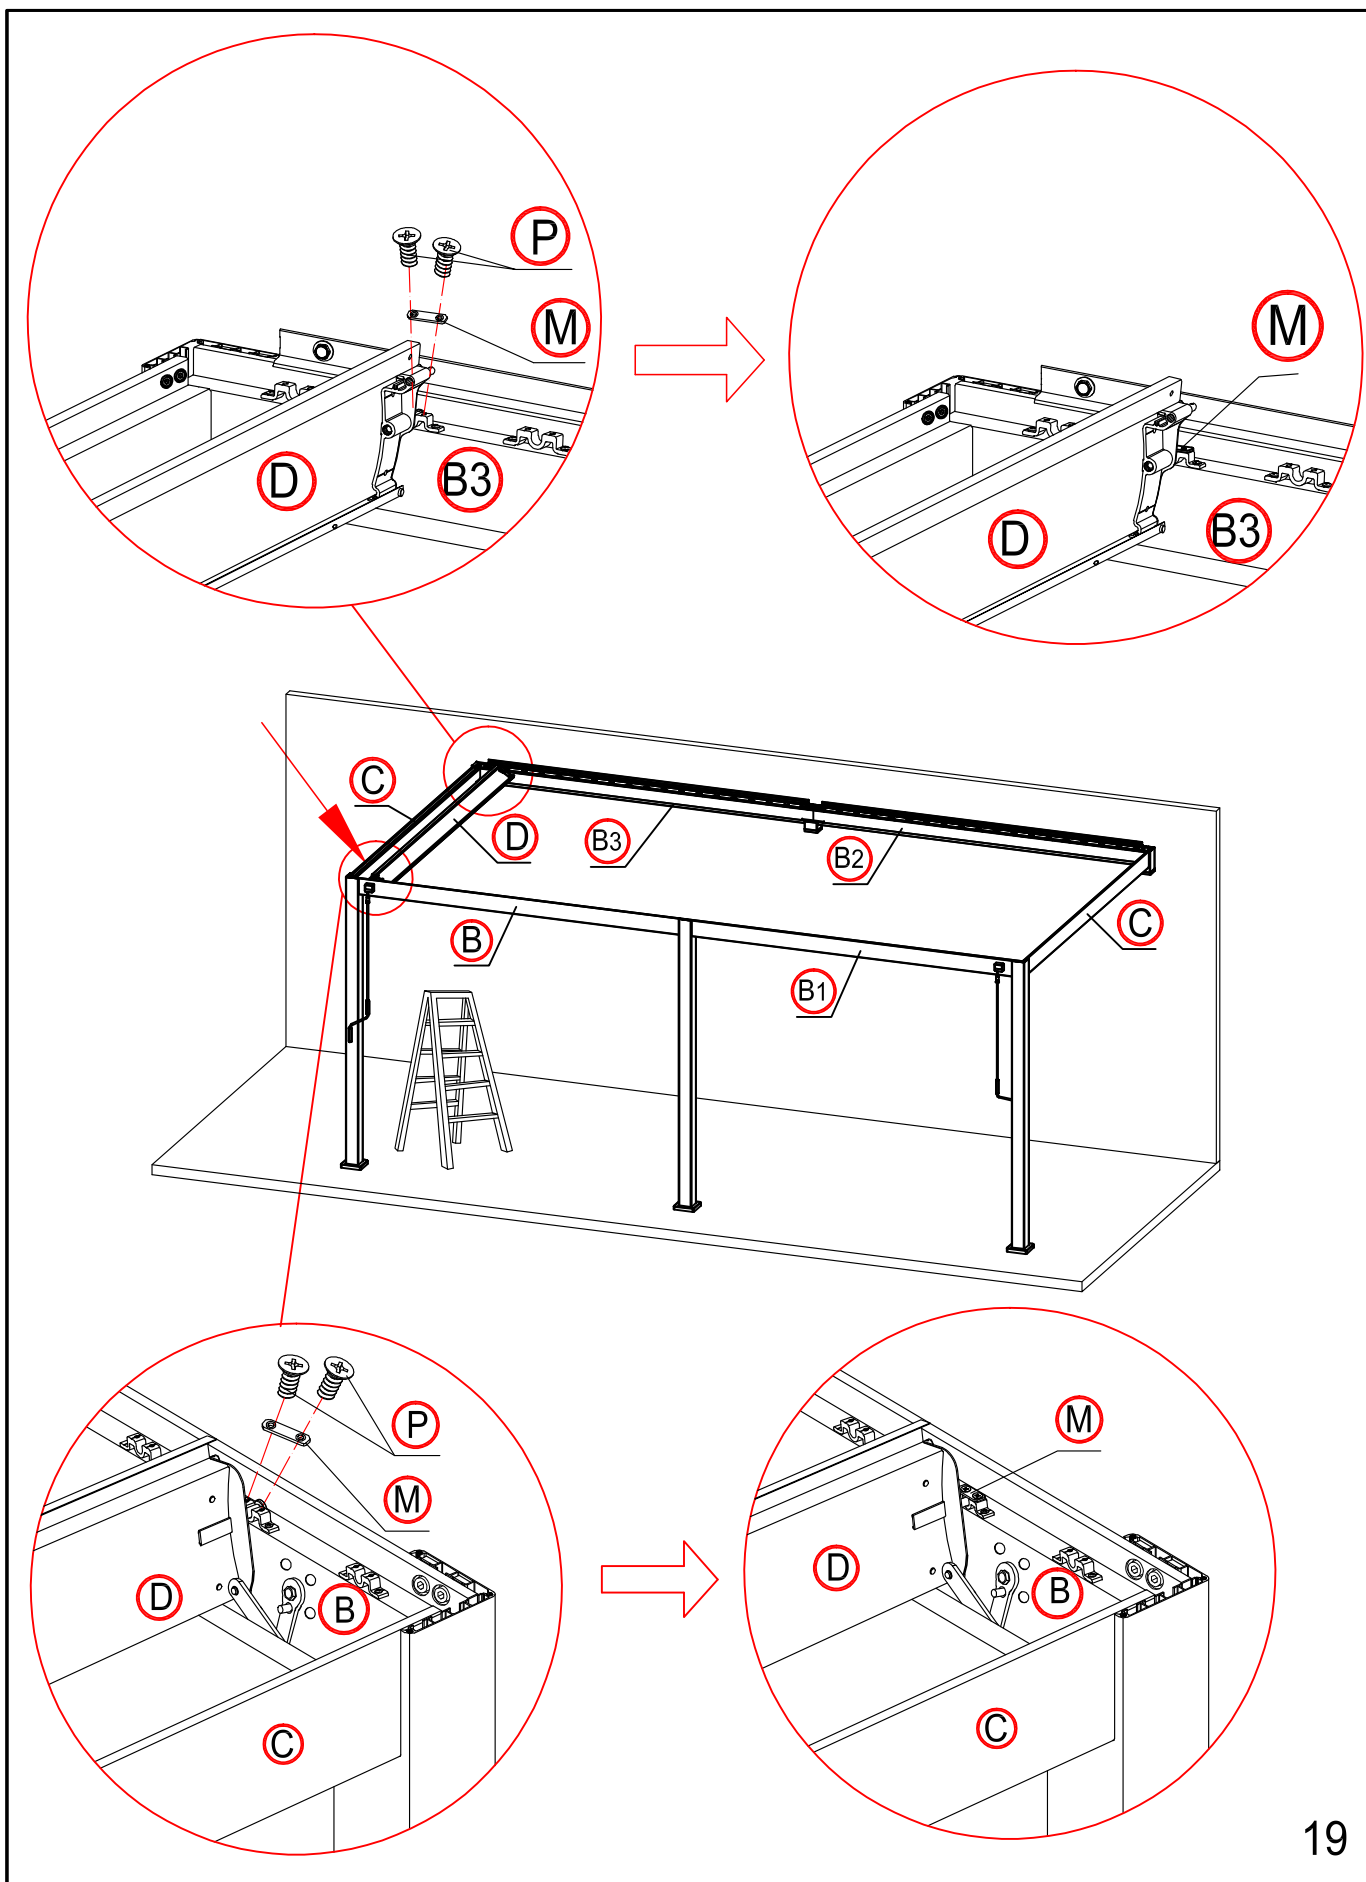


Assemble the first slice to the right.


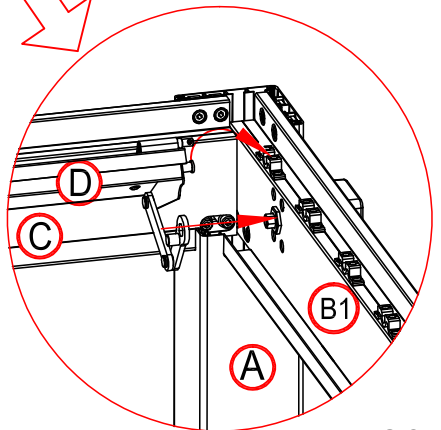
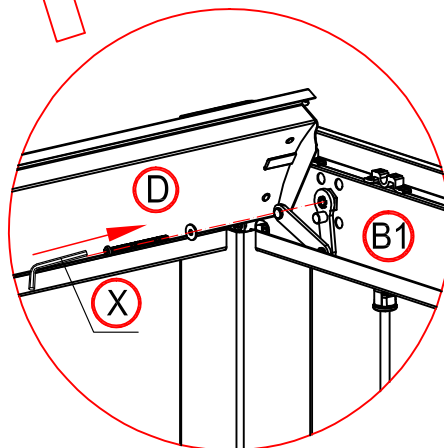
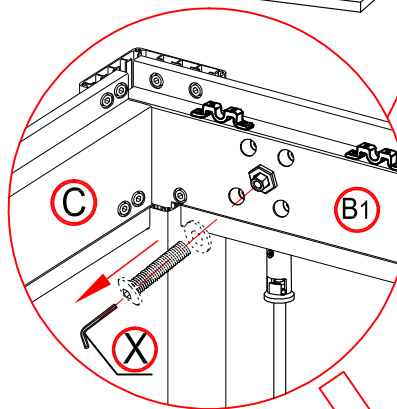
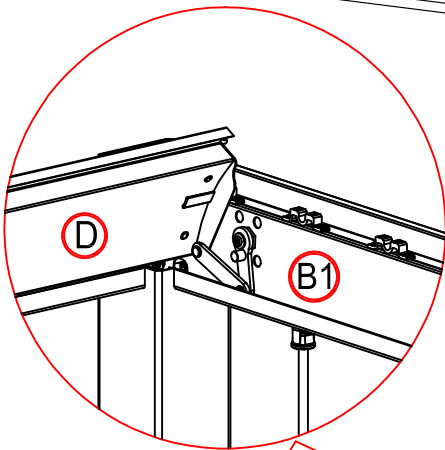
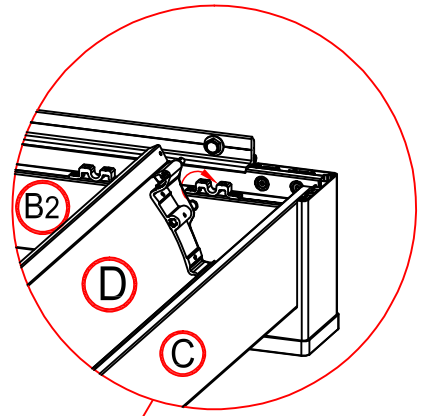
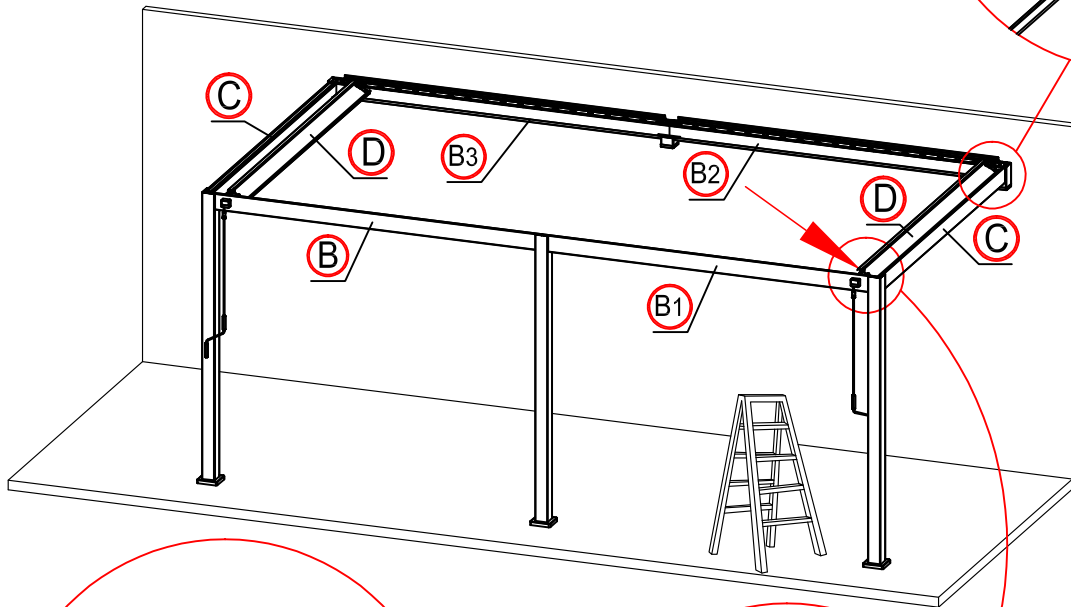


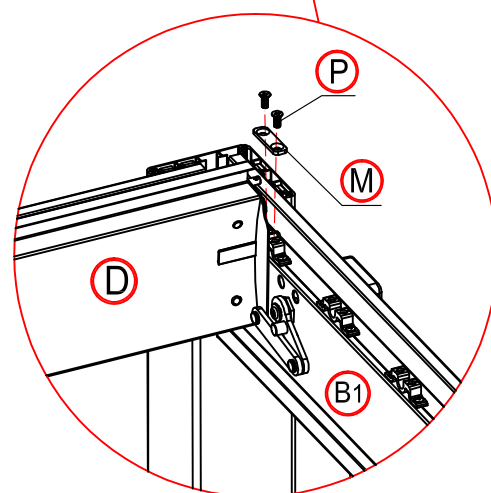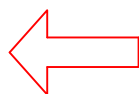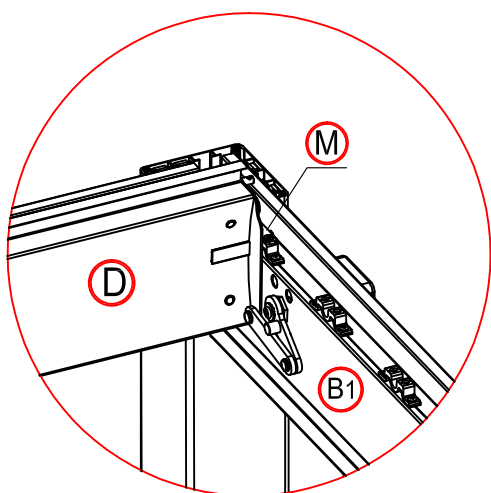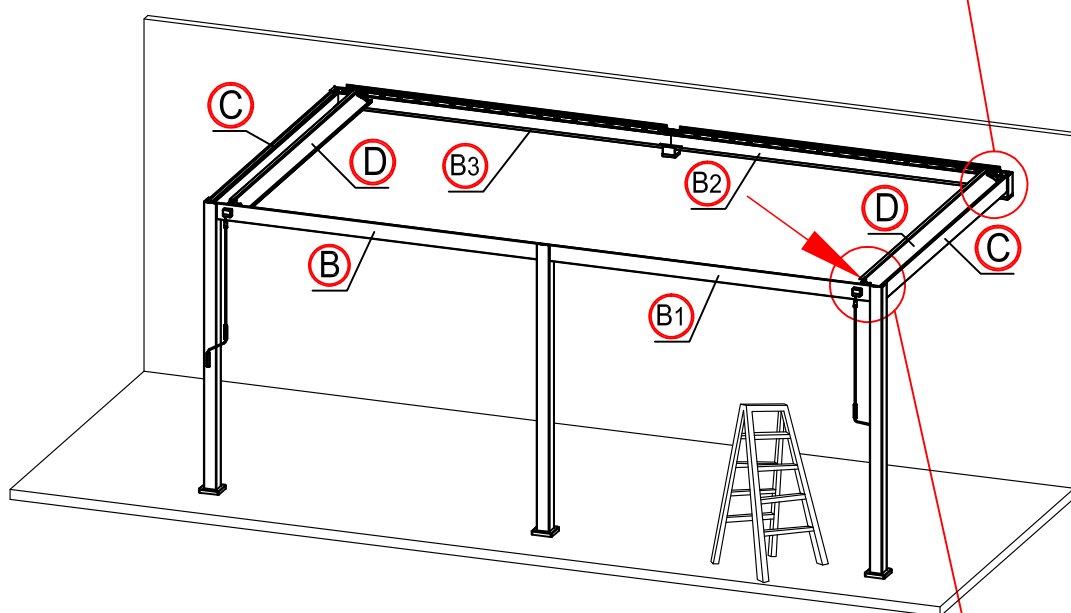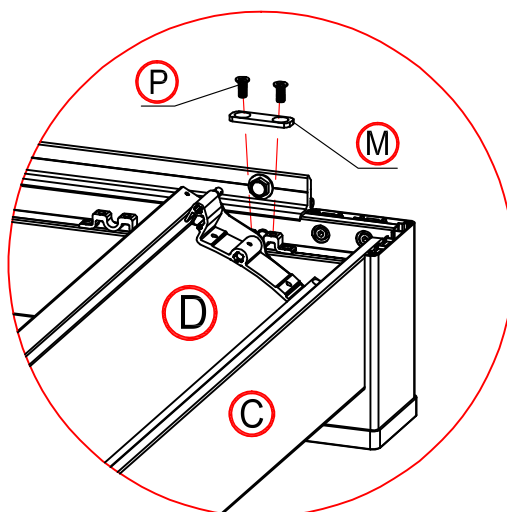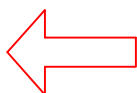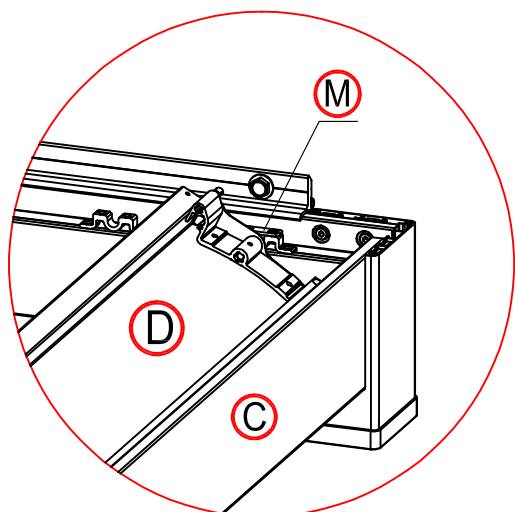


×36 times

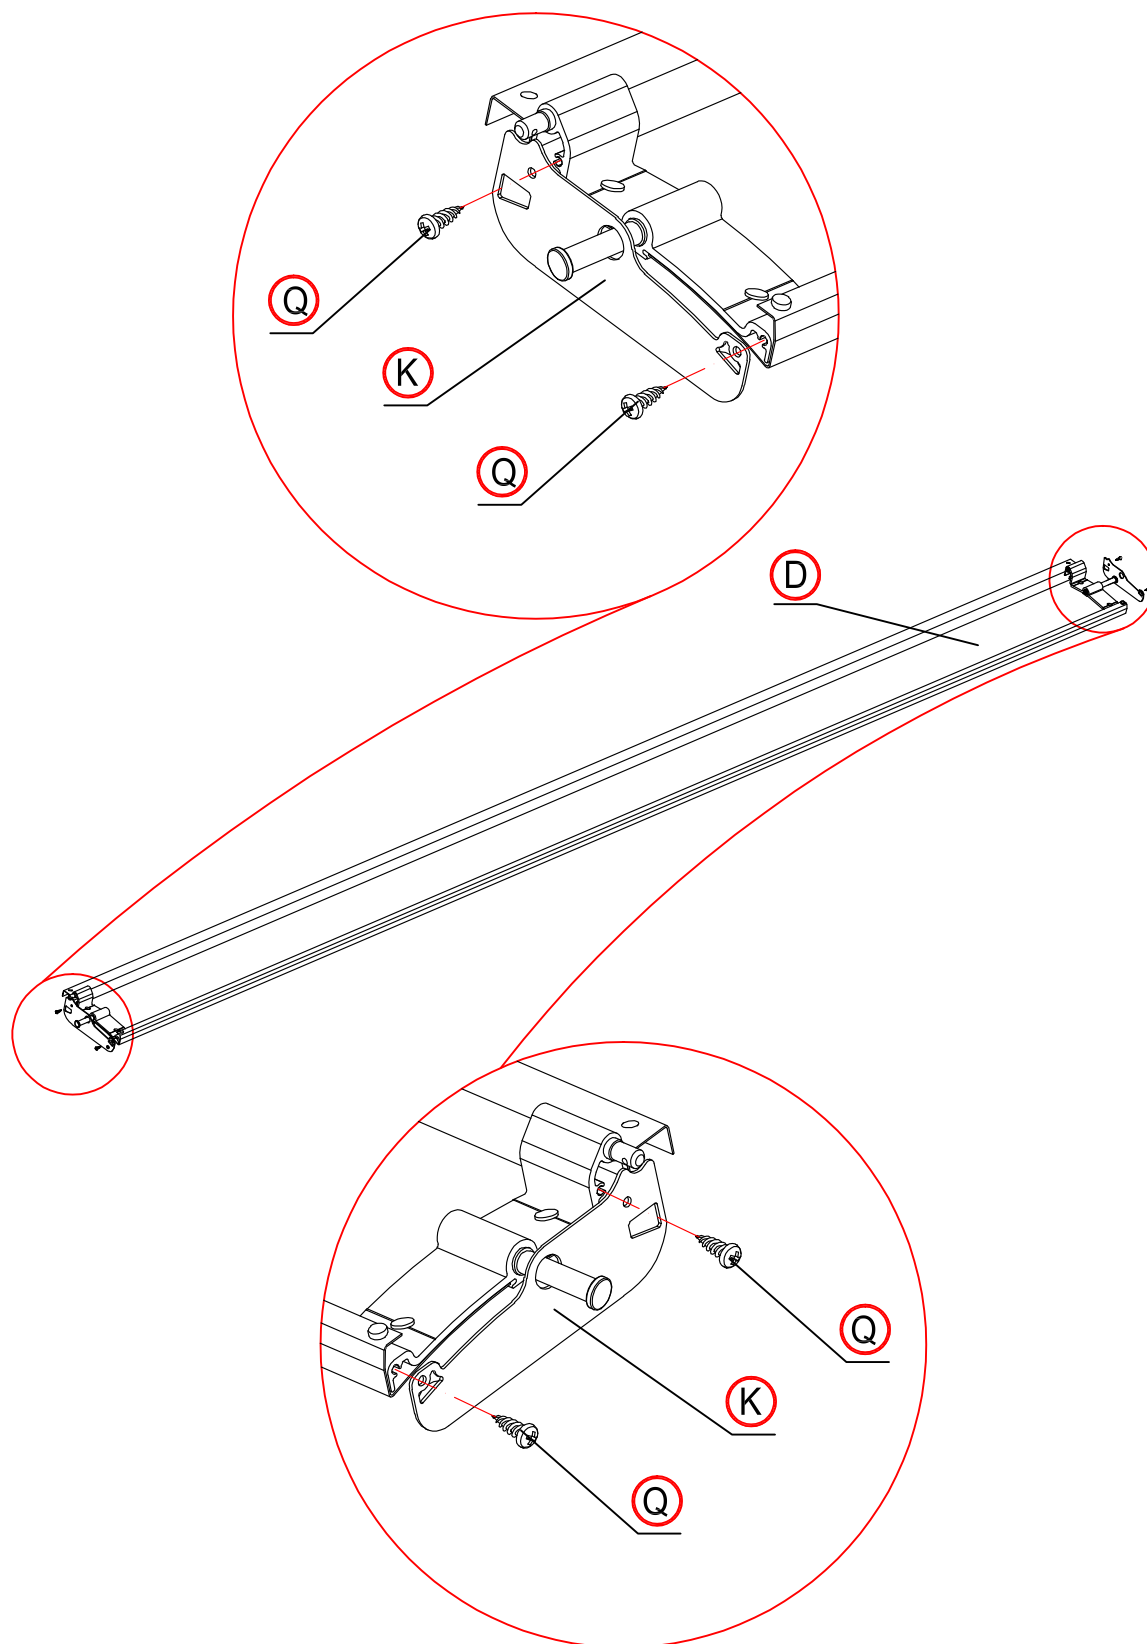









Please install the middle two shutters first.

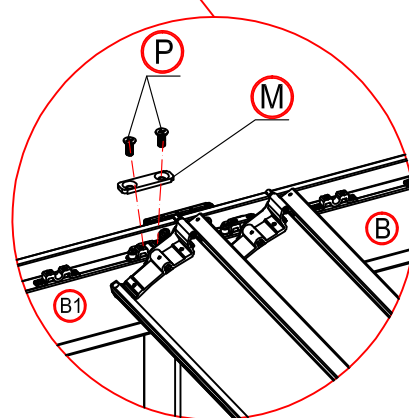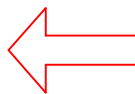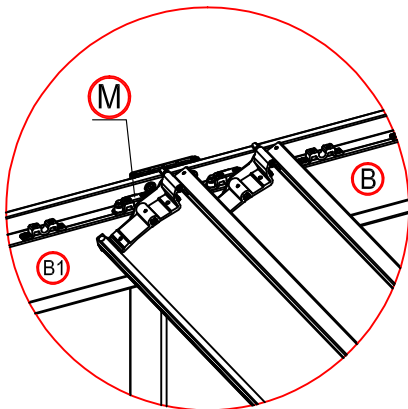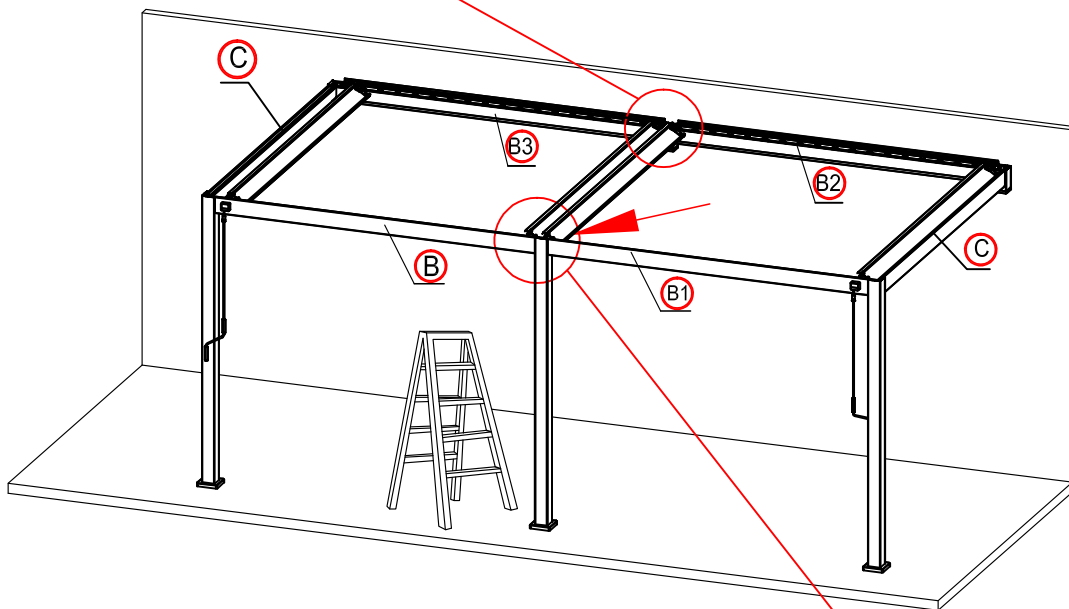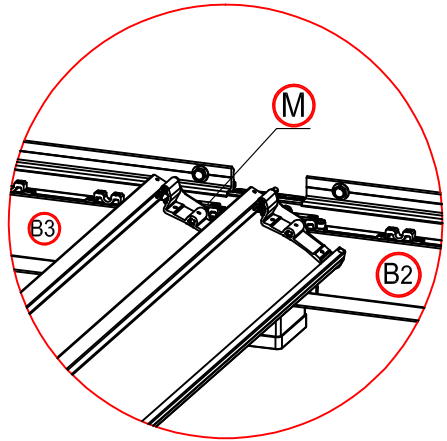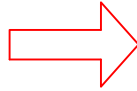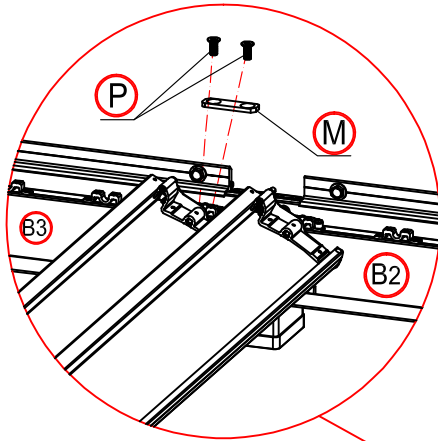


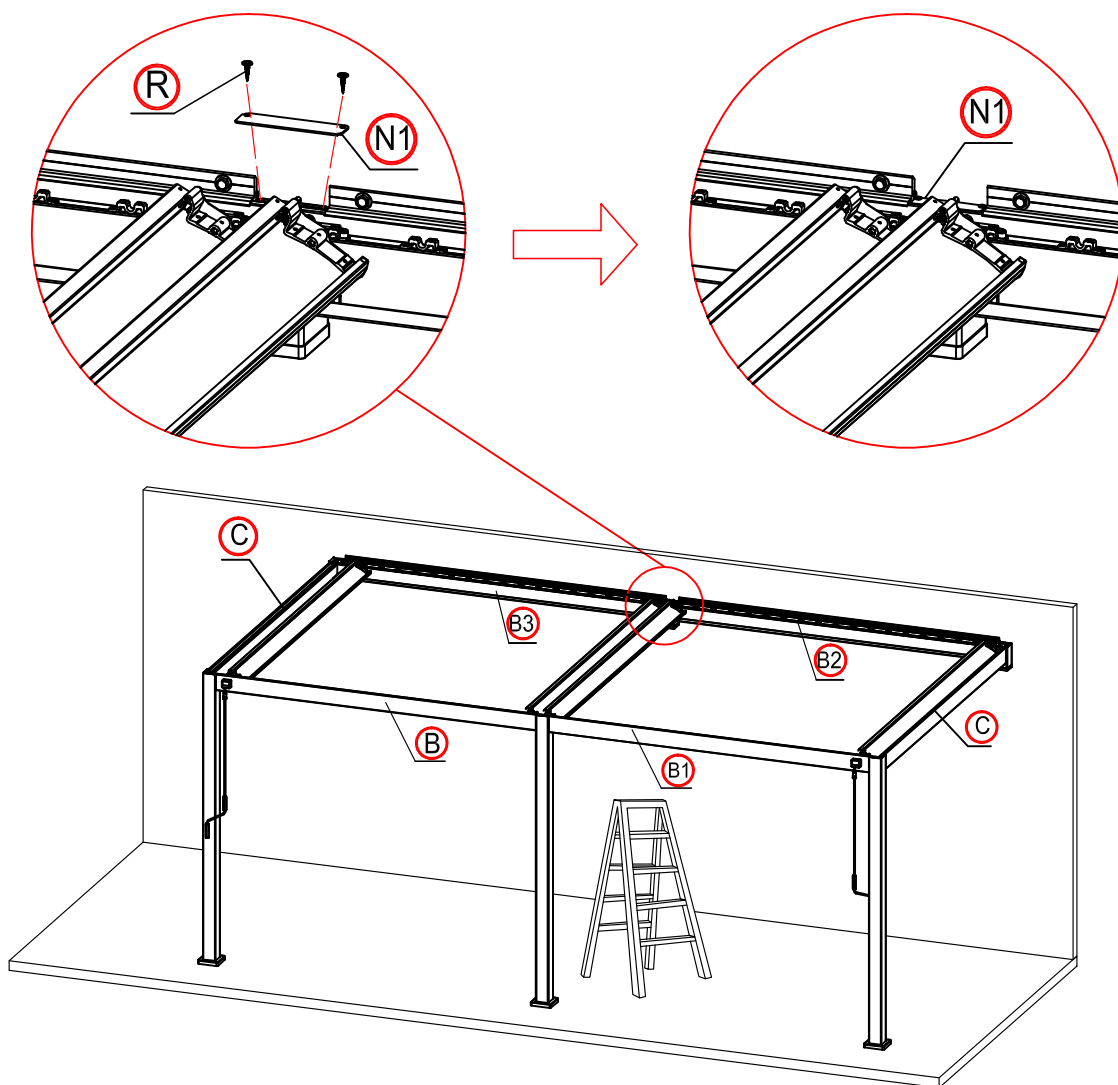



Make the shutter as vertical.





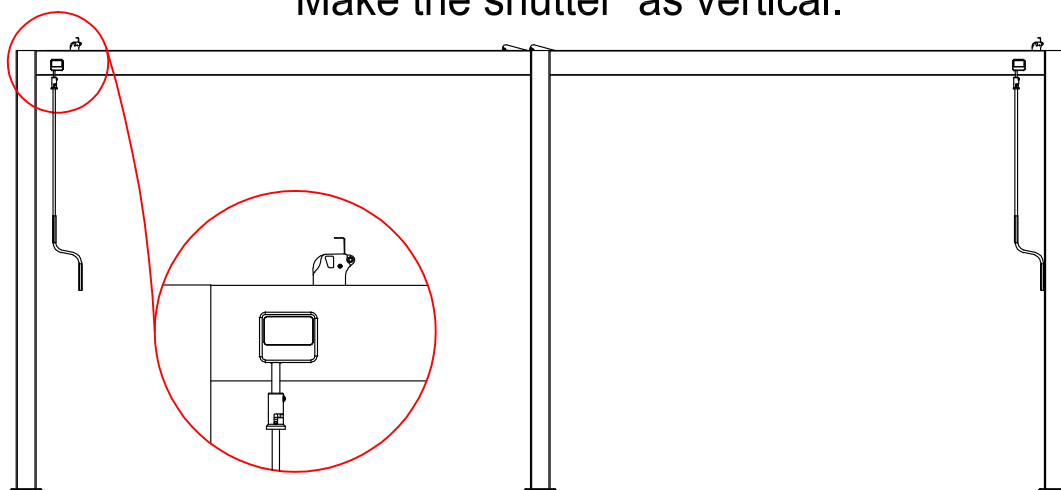


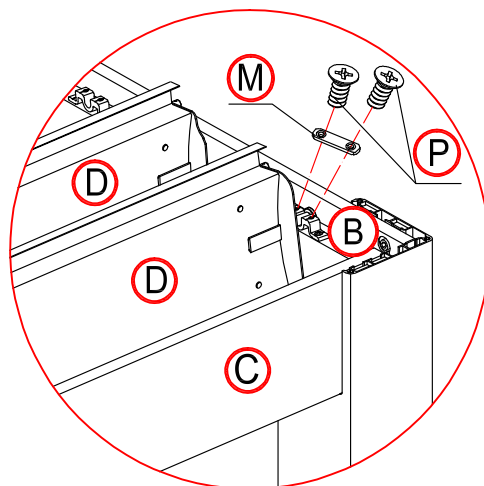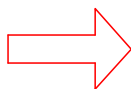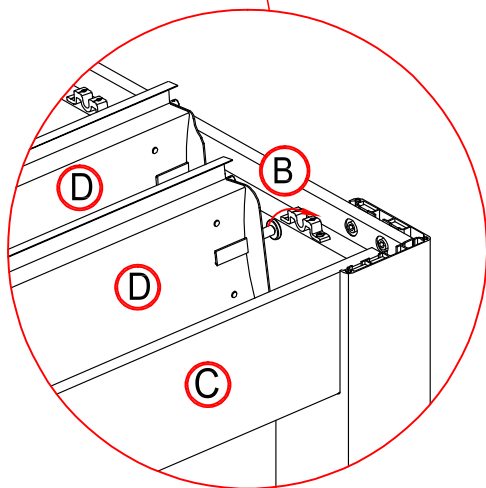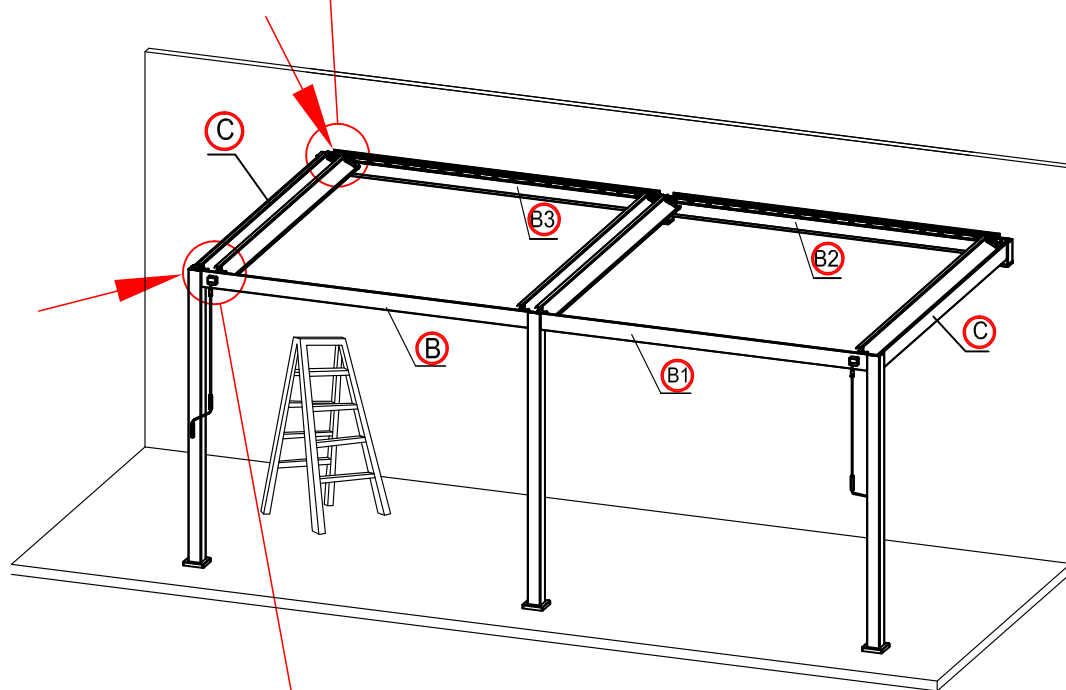
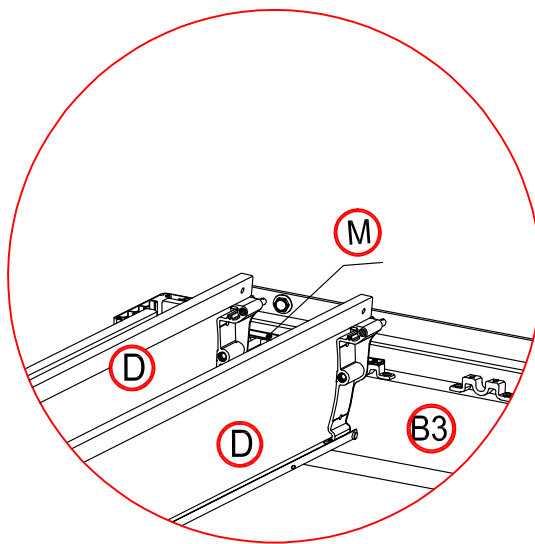
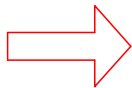
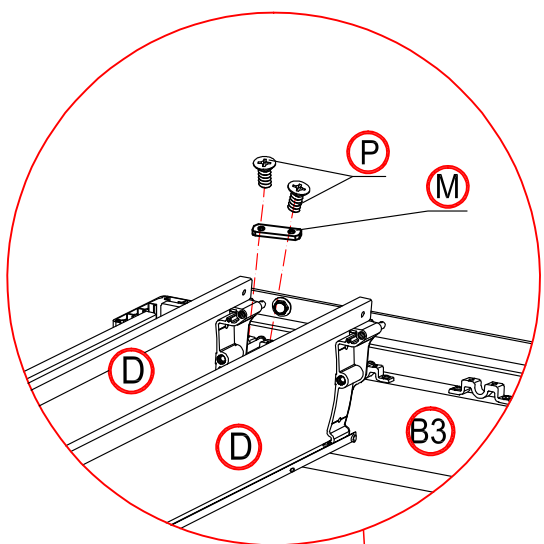


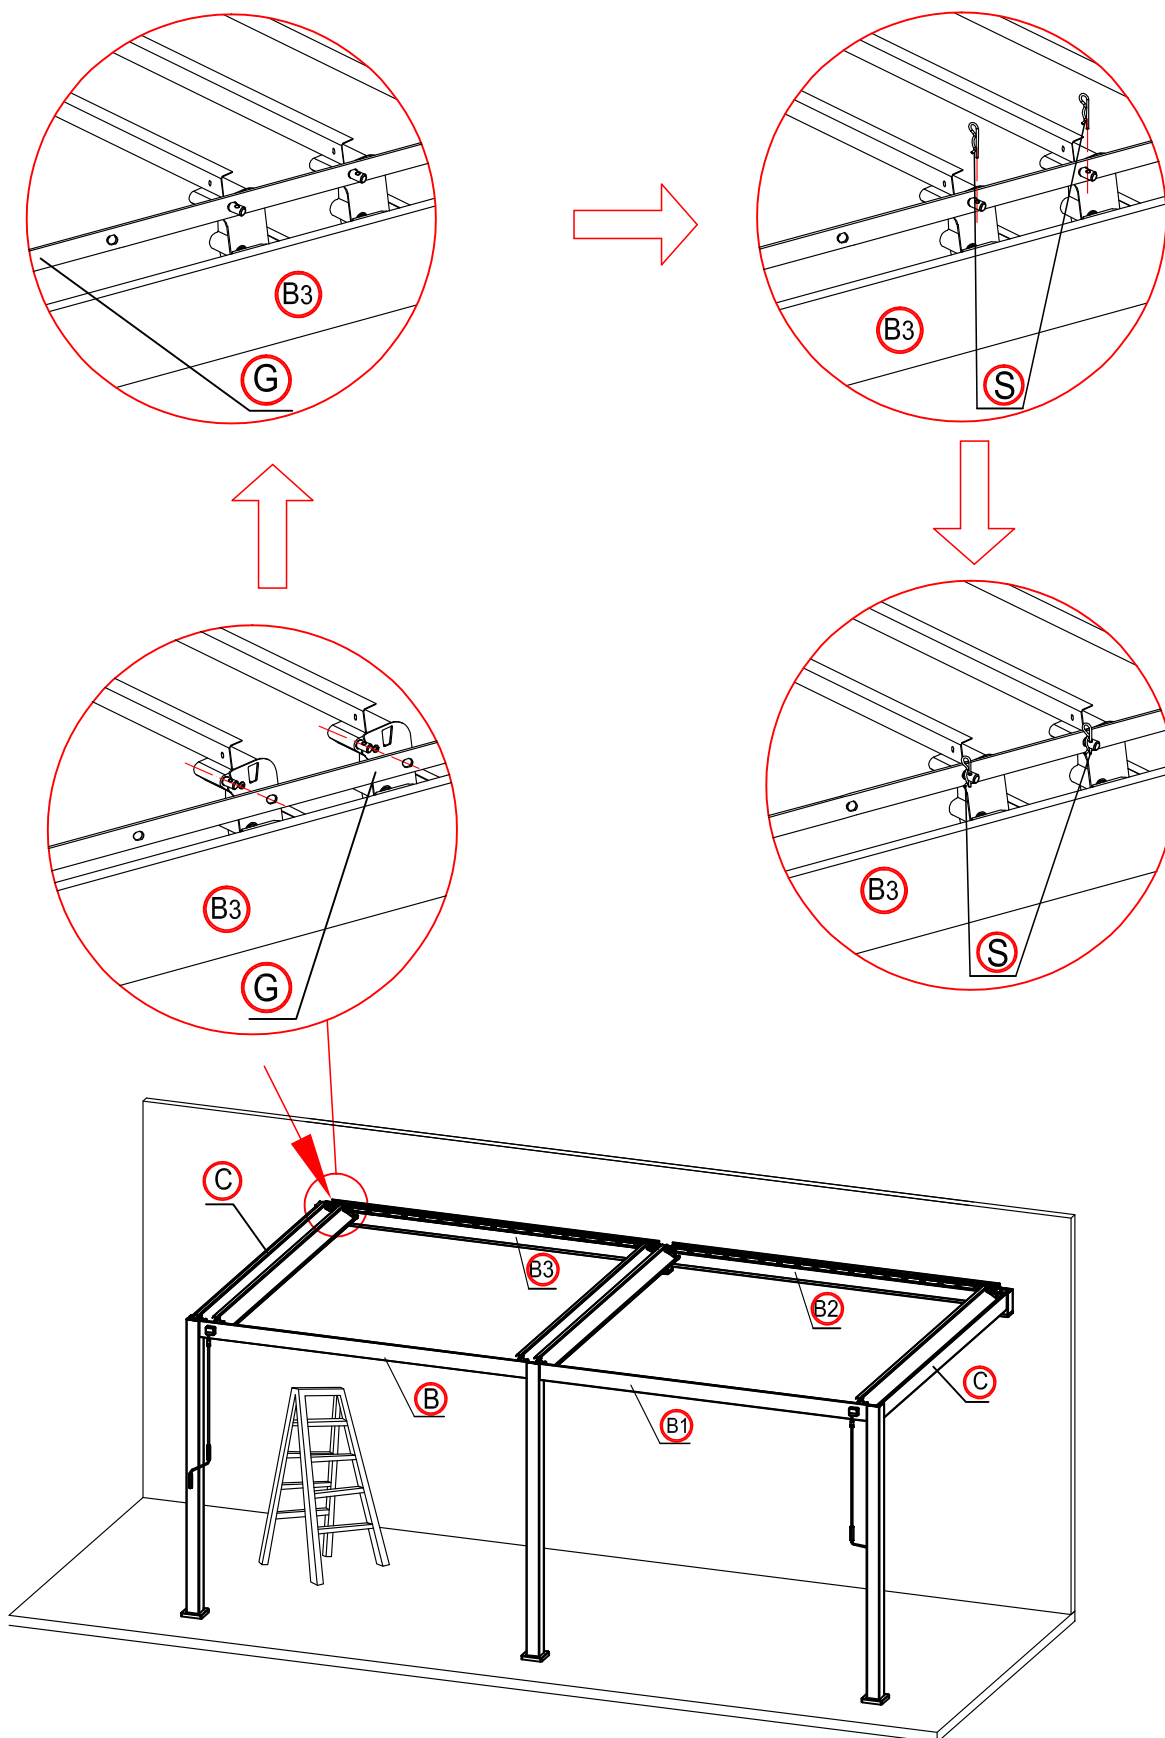

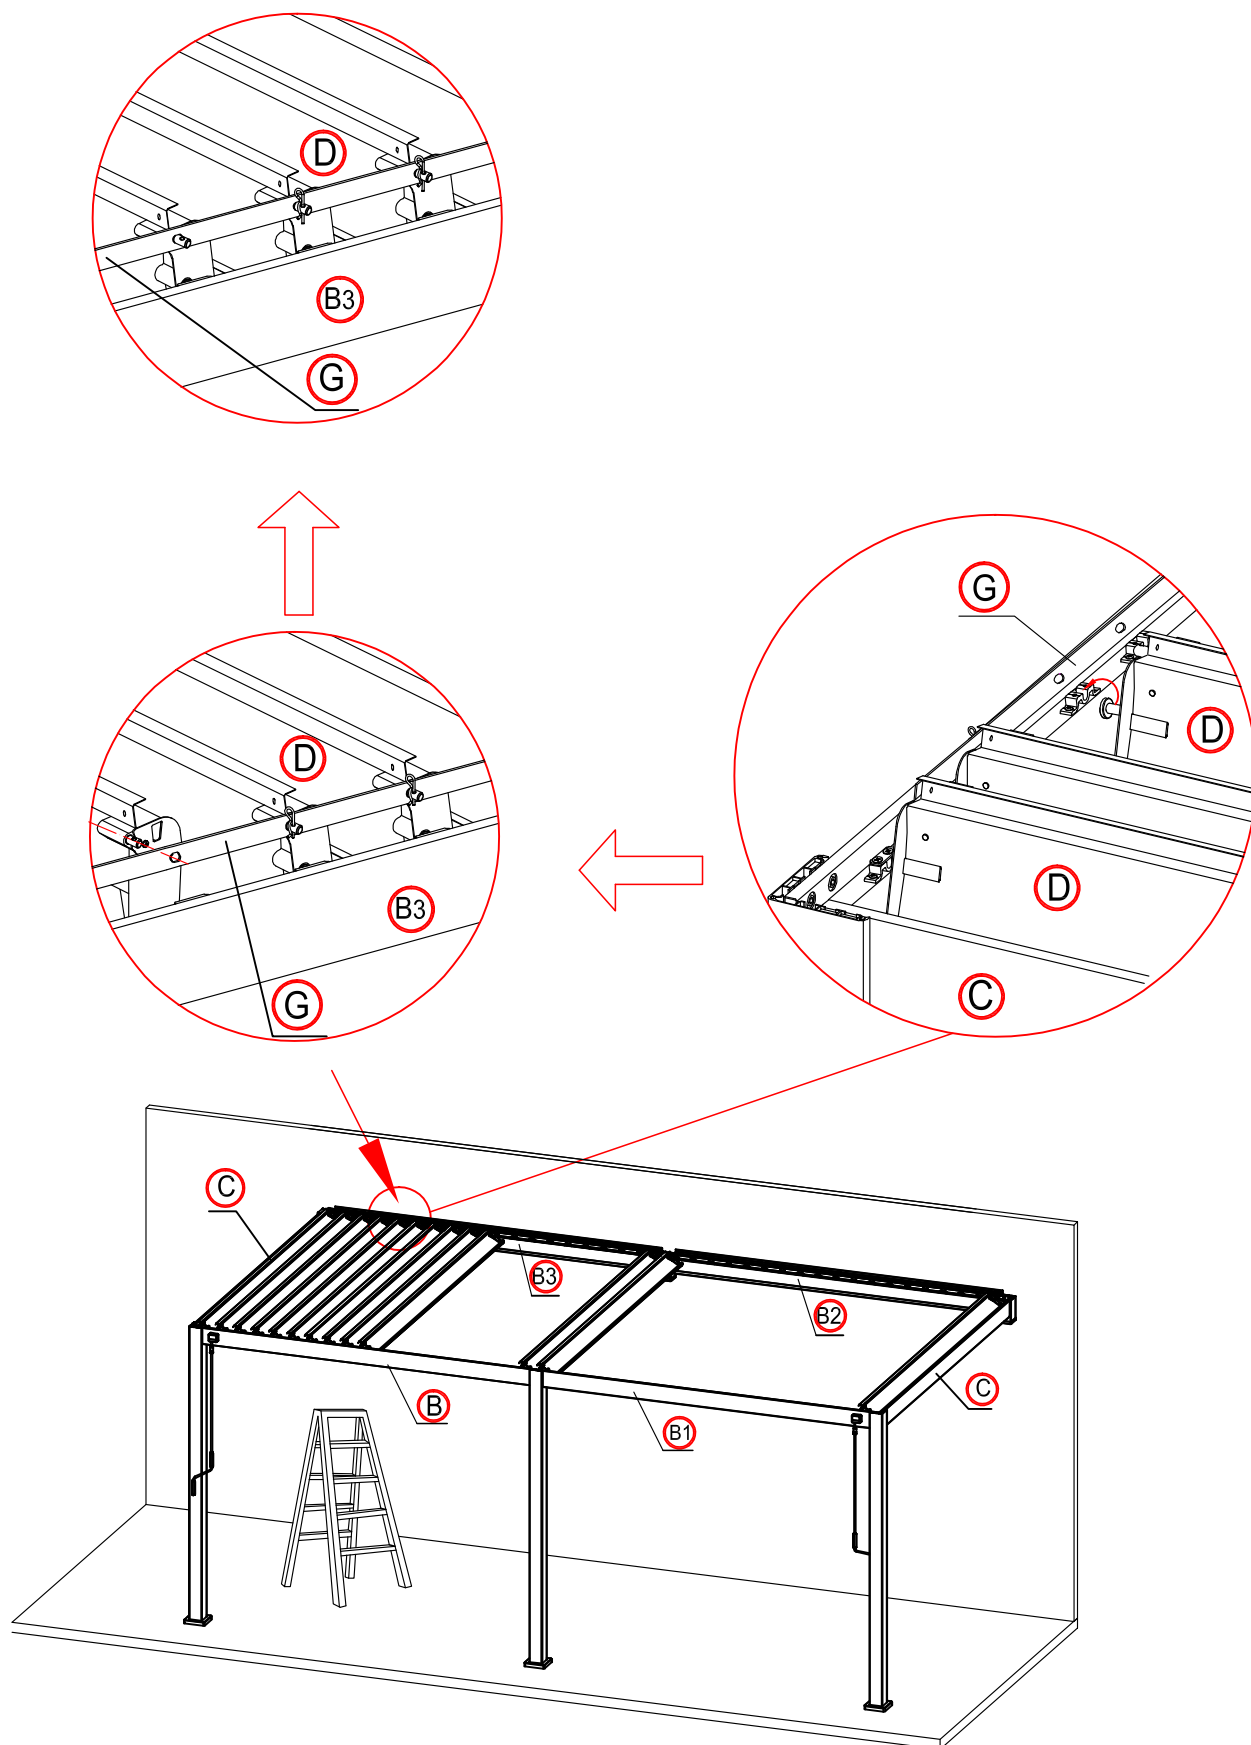

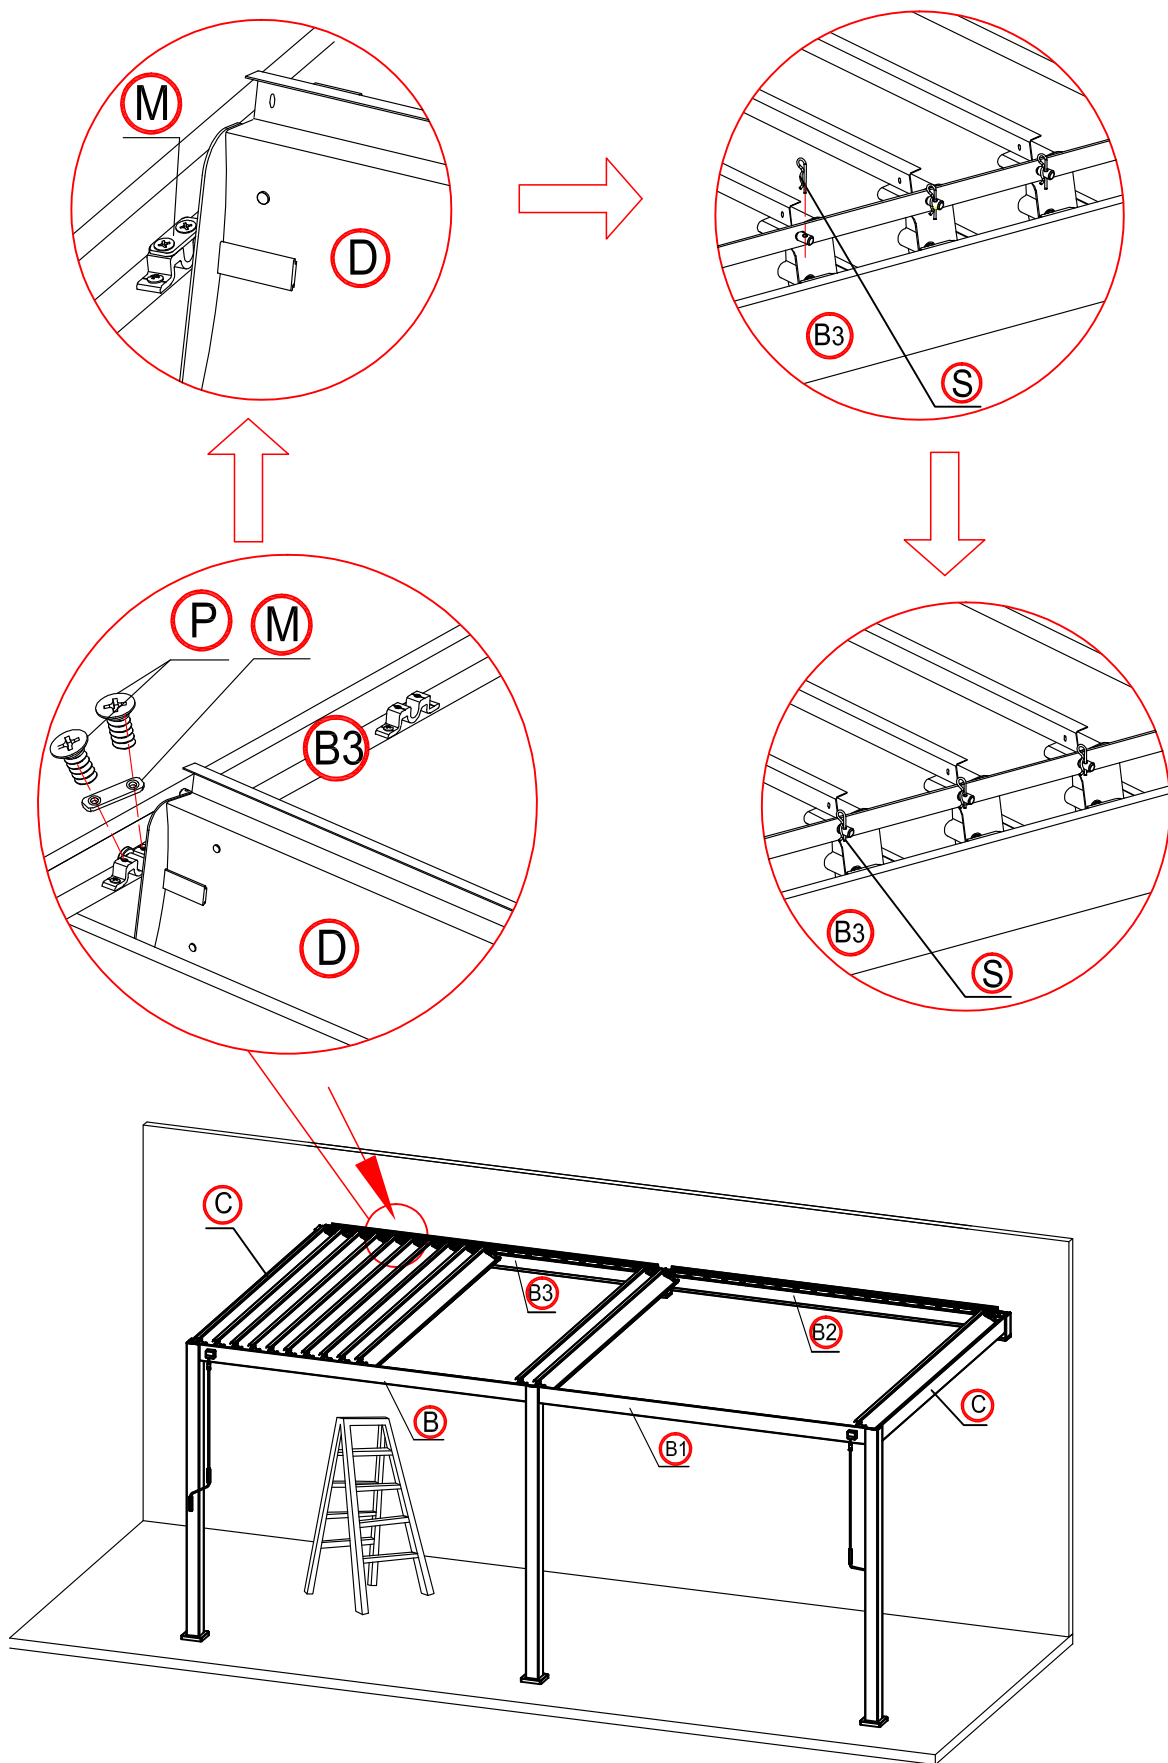

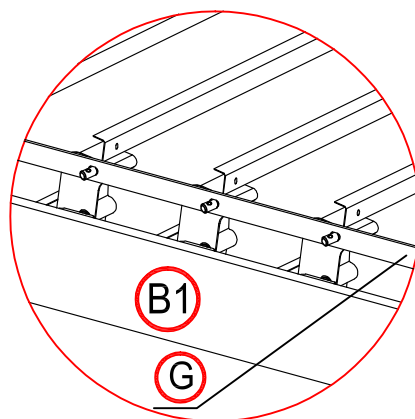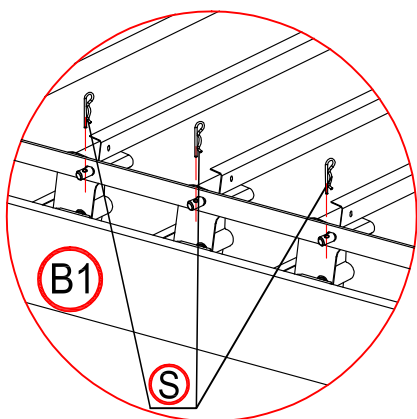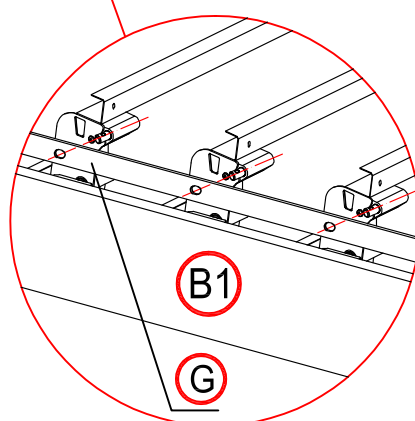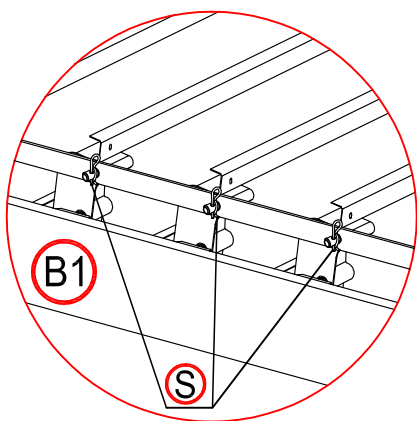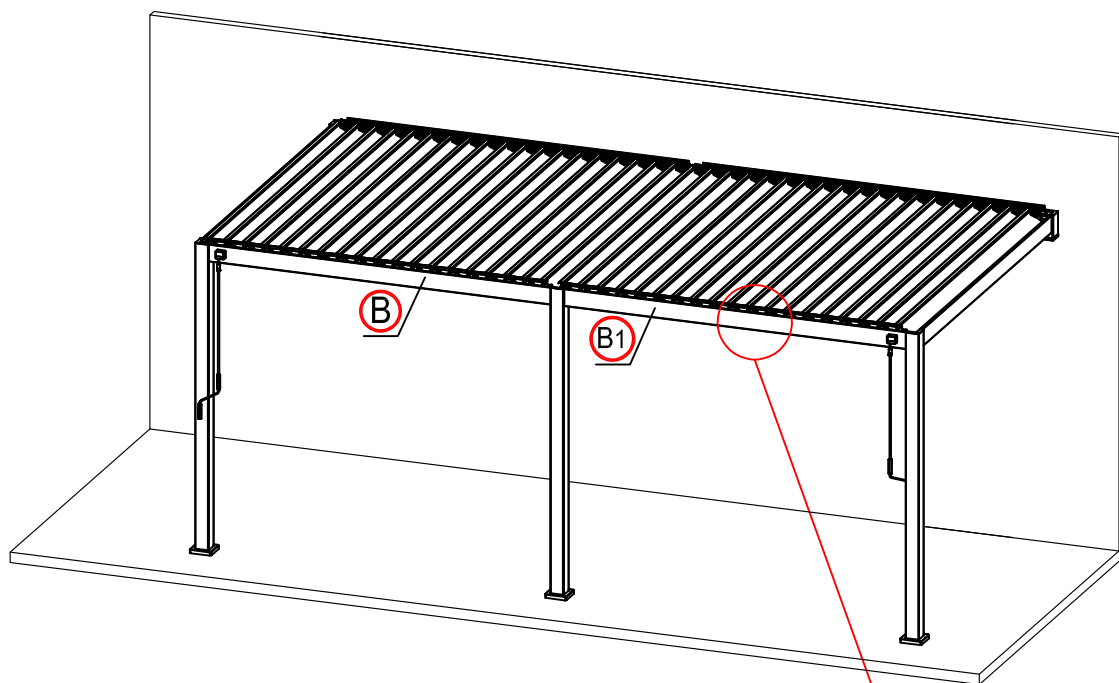

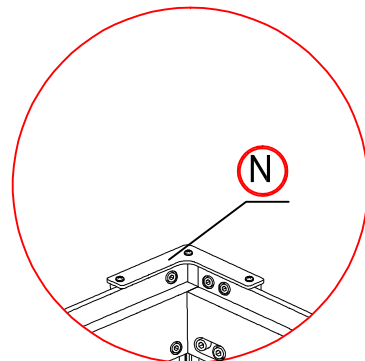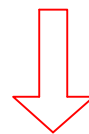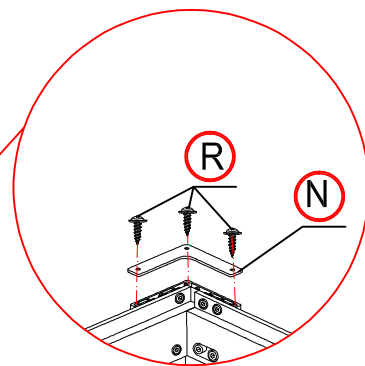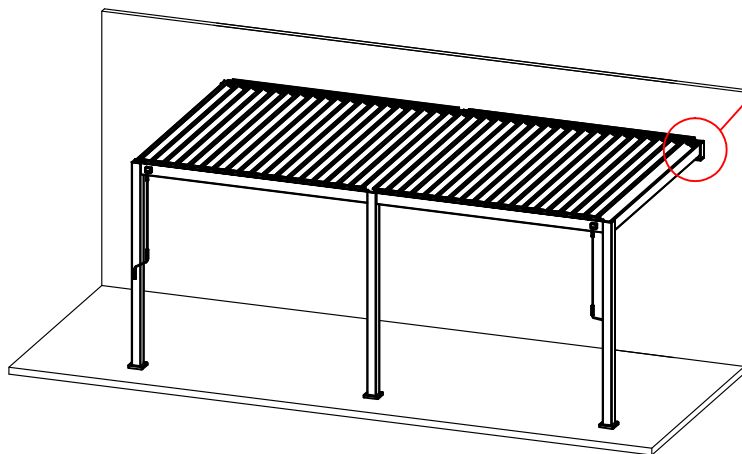




30

Please install the pergola on flat and firm ground.


To avoid any possible issues when installing other accessories in the future, please tighten all expansion bolts after making sure horizontal and vertical dimensions are correct.

A 12mm diameter SDS-plus hammer drill bit is included in the package.

You may have to use your own drill bit if it does not fit your drill.

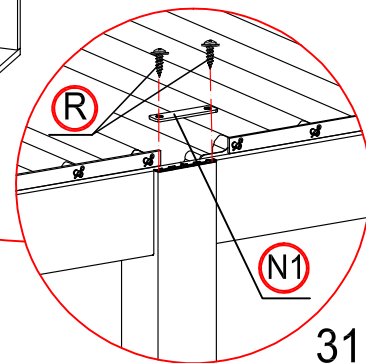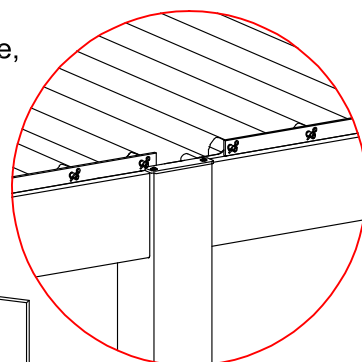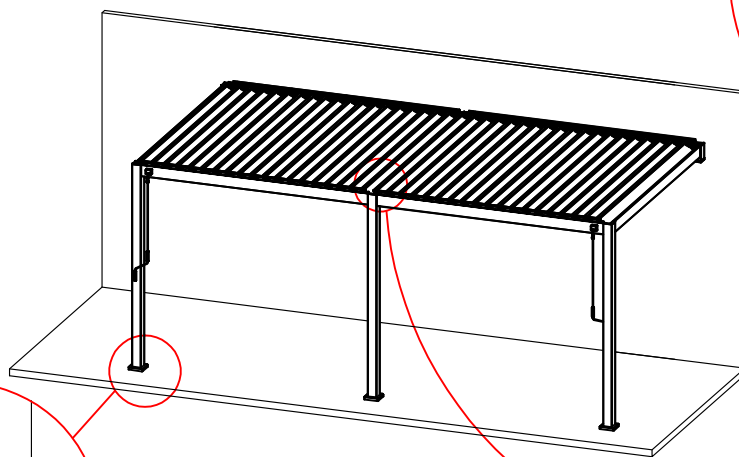

31

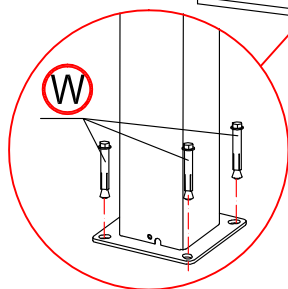

32

